

# TP804 Knightswood Single Swing Frame

# TP802 Knightswood Double Swing Frame

# TP803 Knightswood Triple Swing Frame



**INSTRUCTIONS FOR ASSEMBLY MAINTENANCE AND USE**  
PLEASE RETAIN FOR FUTURE REFERENCE.



TP804 Knightswood Single Swing Frame



TP802 Knightswood Double Swing Frame




TP803 Knightswood Triple Swing Frame



- Important!** These instructions must be followed for safe assembly and use. Please retain for future reference.
- Important!** Vous devez suivre ces instructions pour que le montage et l'utilisation se fassent en toute sécurité. Veuillez conserver pour référence ultérieure.
- Importante!** Per garantire sicurezza di montaggio ed uso, seguire queste istruzioni e conservarle per futuro riferimento.
- Importante!** Debe seguirse estas instrucciones para un armado y uso seguros. Sírvase conservarlas para consultarlas en el futuro.
- Wichtig!** Diese Anweisung ist für sicheren Aufbau und Gebrauch zu befolgen. Für künftigen Gebrauch aufbewahren.
- Importante!** Para assegurar uma montagem e uma utilização seguras, têm de ser seguidas estas instruções. Guardar para referência futura.

## **WARNING!**

TOY MUST BE ASSEMBLED BY AN ADULT BEFORE USE.  
THIS PRODUCT CONTAINS SMALL PARTS AND IS NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS. SMALL PARTS. CHOKING HAZARD.  
CHILDREN MUST NOT USE THE EQUIPMENT UNTIL PROPERLY INSTALLED.  
REMOVE ALL PACKAGING BEFORE GIVING TO YOUR CHILDREN.  
ONLY FOR DOMESTIC USE. FOR OUTDOOR USE. ADULT SUPERVISION IS REQUIRED.  
THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 12 YEARS.  
SINGLE SWING FRAME - MAXIMUM COMBINED USER WEIGHT 100KGS  
DOUBLE & TRIPLE SWING FRAMES - MAXIMUM COMBINED USER WEIGHT 200KGS  
ANCHORS THAT ARE SUPPLIED WITH THIS PRODUCT MUST BE FITTED BEFORE USE.

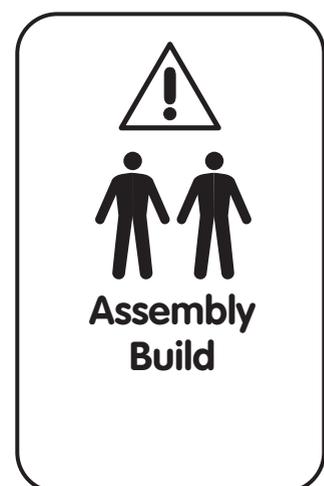









# Instruction Guide


## Read Instructions Before Starting

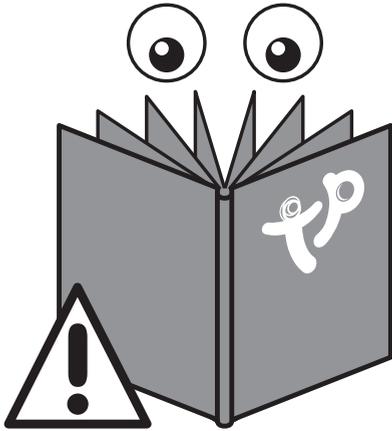


## Hidden Lines

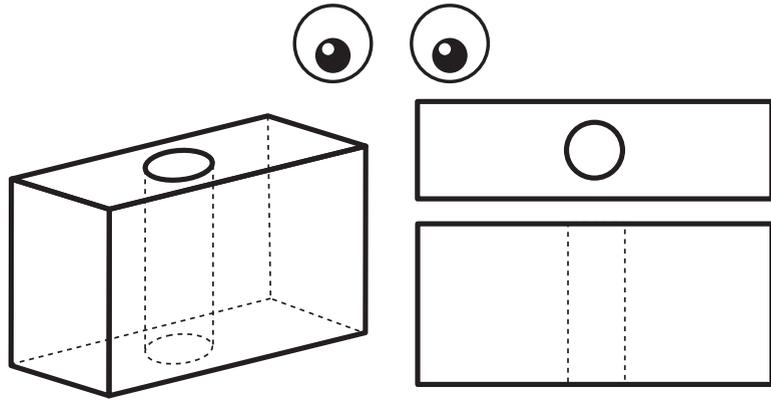

## Sort Fixings

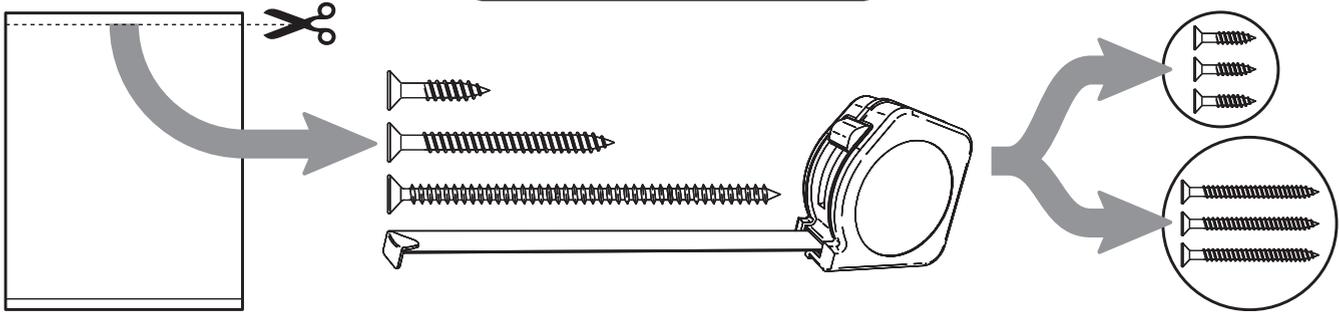

## Sort Parts

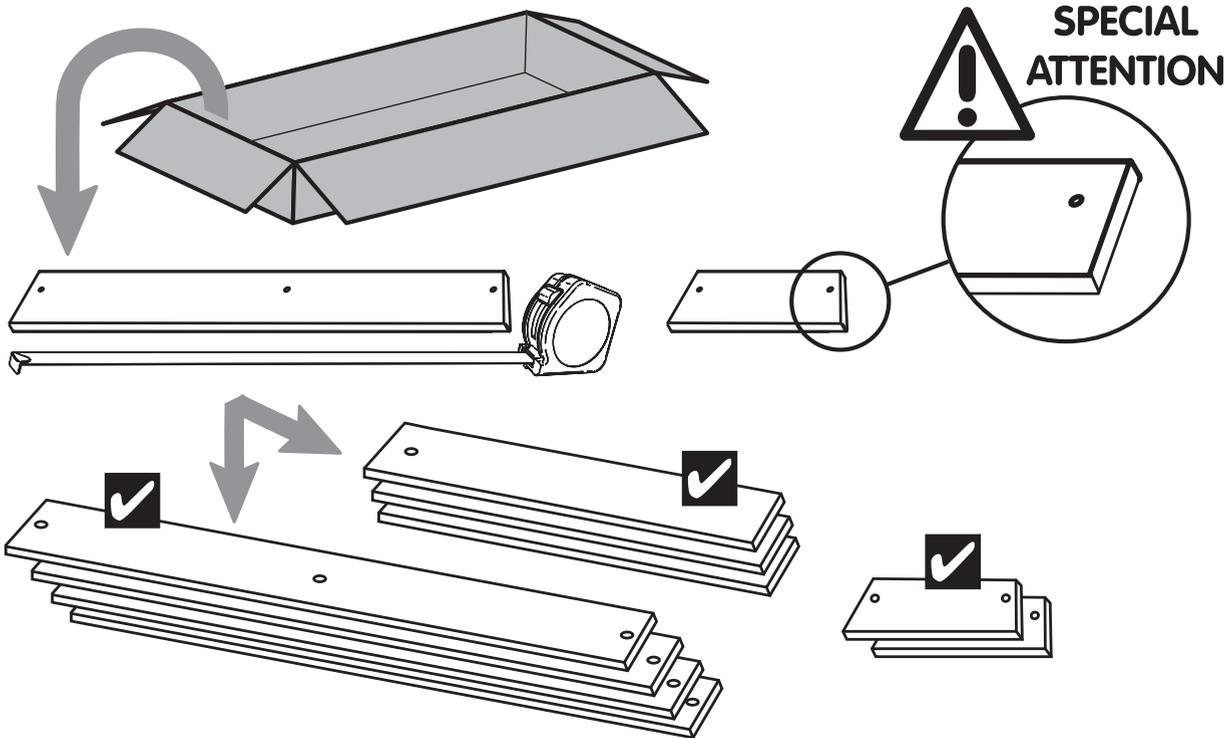

Need Help? Visit [www.tptoys.com](http://www.tptoys.com) TP Customer Services: (English Speaking)



**Stage 1**

# TP804 Single Knightwood Swing Frame

 
## Contents

- Please check

Contenu - Veuillez Vérifier  
Siete Pregati di  
Controllare il Contenuto  
Verifique El Contenido  
Inhalt - Bitte Überprüfen

### Tools - You will need:

Vous aurez besoin de: Sie benötigen:  
Avrete bisogno: Precisarà:  
Vai precisar:




### TP800 - Pack 2




### TP800 - Fixings SP0075

 M8 Hook bolt **x6**  
FA9774



 M8 x 25mm  
Large washer  
FA7184  
**x18**




M8  
Nylon Insert Nut  
FA5174  
**x6**



M8 x 70mm  
Coach screw  
FA8439  
**x16**



 13mm x 10mm  
Spanner **x1**  
PR9554



### TP804- Pack 1

MW0204 Single Round Wood Top Bar **x1**



MW0200 Round Wood Leg **x2**



### TP801 - Pack 3

MW0200 Round Wood Leg **x2**



MW0202 Round Wood Sidestay **x2**



**Stage 2**



MW0204 Single Round Wood Top Bar **x1**



M8 x 25mm  
Large washer  
FA7184  
**x4**






M8 x 70mm Coach screw **x4**  
FA8439

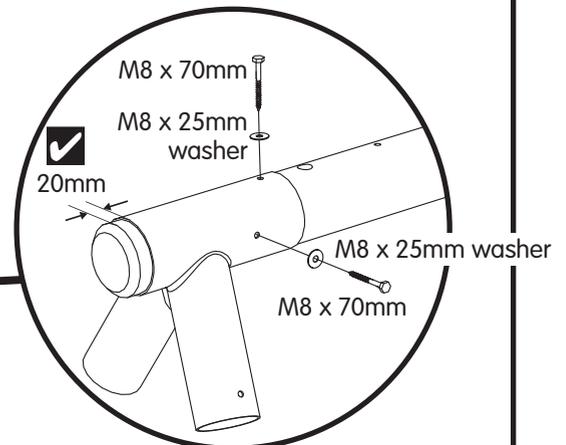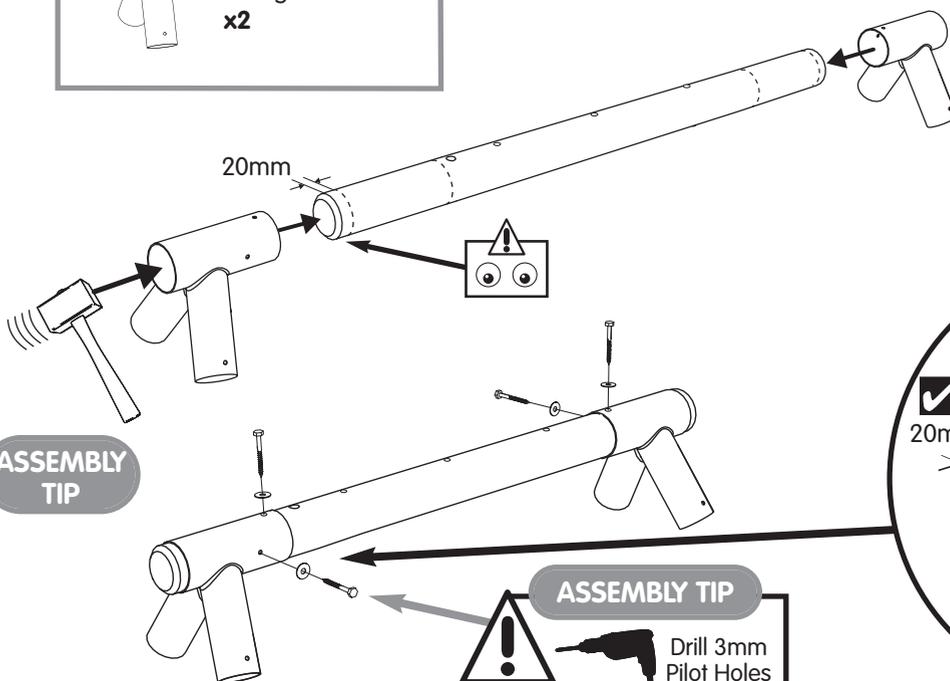

**Stage 3**

  **TP804 Single Knightwood Swing Frame**

M8 Hook bolt <b>x4</b> FA9774 	M8 x 25mm Large washer FA7184 <b>x4</b> 	M8 Nylon Insert Nut FA5174 <b>x4</b> 
---	--	---

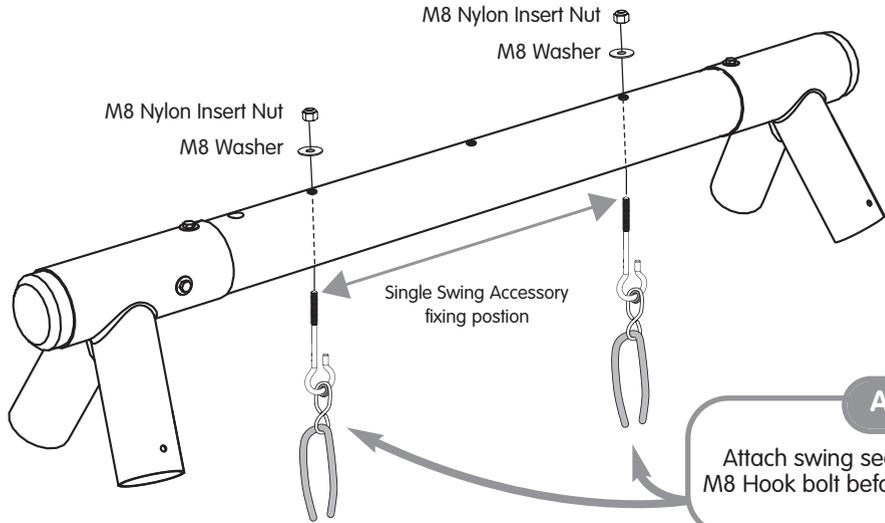


**ASSEMBLY TIP**

Attach swing seat ('S' hook or Snap Shackle) to M8 Hook bolt before inserting Hook bolt to top bar (see below)


**Warning**


Refer to separate Swing accessory instructions for correct seat fixing eg: Hook Bolt or Duo Ride Brackets!

TP879 Skyride/TP933 Pirate Boat require TP774 Duo Ride Brackets (optional purchase).

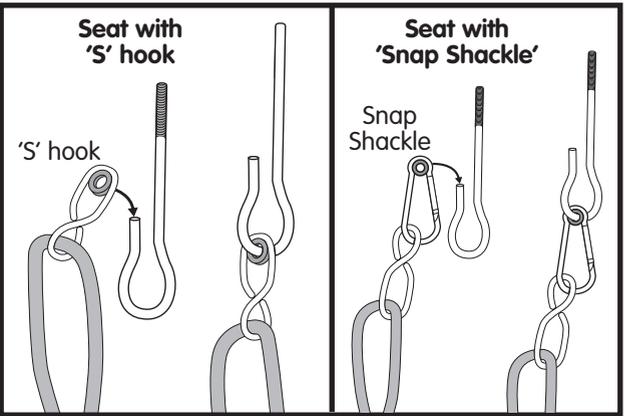

**ASSEMBLY TIP**

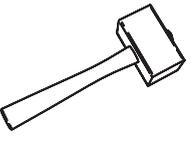 Use Mallet to firmly locate hook bolt in pilot hole

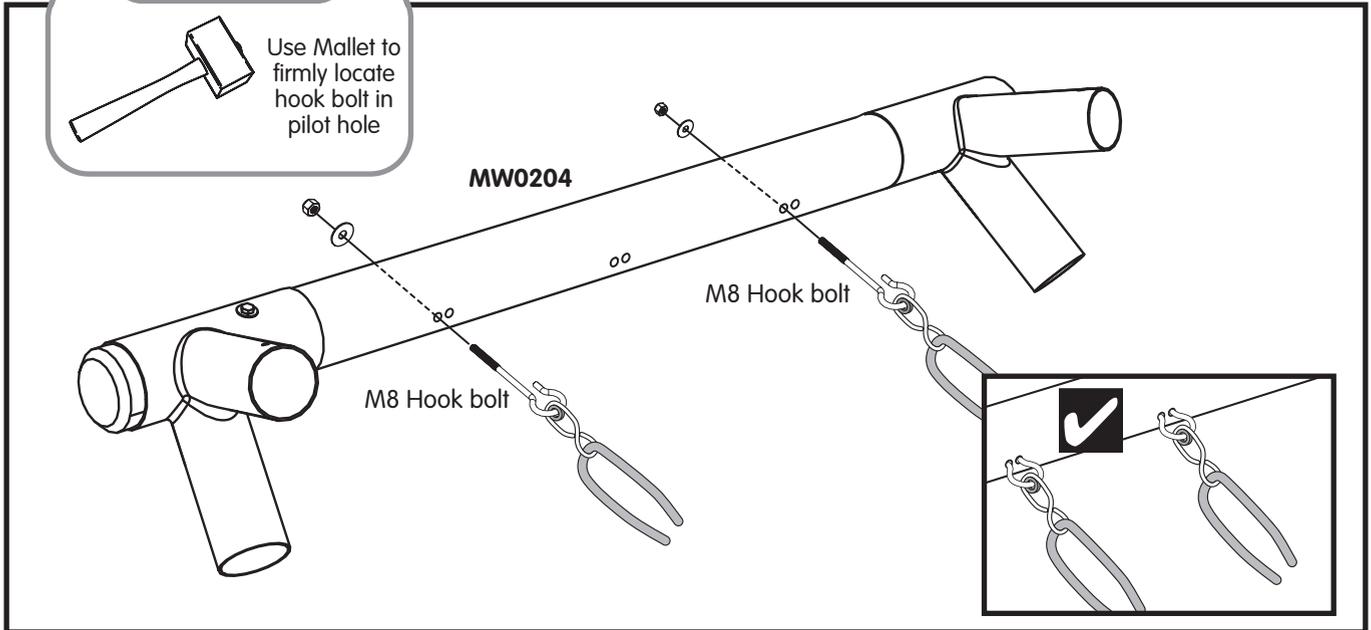

**Stage 1**

**TP802 Double Knightwood Swing Frame**

**Contents**


- Please check

**TP800 - Pack 2**




**TP800 - Fixings SP0075**

 M8 Hook bolt **x6**  
FA9774



 M8 x 25mm  
Large washer  
FA7184  
**x18**



M8  
Nylon Insert Nut  
FA5174  
**x6**



M8 x 70mm  
Coach screw **x16**  
FA8439




13mm x 10mm  
Spanner **x1**  
PR9554



Contenu - Veuillez Vérifier  
Siete Pregati di  
Controllare il Contenuto  
Verifique El Contenido  
Inhalt - Bitte Überprüfen

**Tools - You will need:**

 Vous aurez besoin de: Sie benötigen:  
Avrete bisogno: Precisarà:  
Vai precisar:



**TP802- Pack 1**

**MW020** Double Round Wood Top Bar **x1**



**MW0200** Round Wood Leg **x2**




**TP801 - Pack 3**

**MW0200** Round Wood Leg **x2**



 **MW0202** Round Wood Sidestay **x2**



**Stage 2**

**MW0203** Double Round Wood Top Bar **x1**




M8 x 70mm Coach screw **x4**  
FA8439



M8 x 25mm  
Large washer  
FA7184  
**x4**






FB6051  
Roundwood  
Swing Bracket  
**x2**

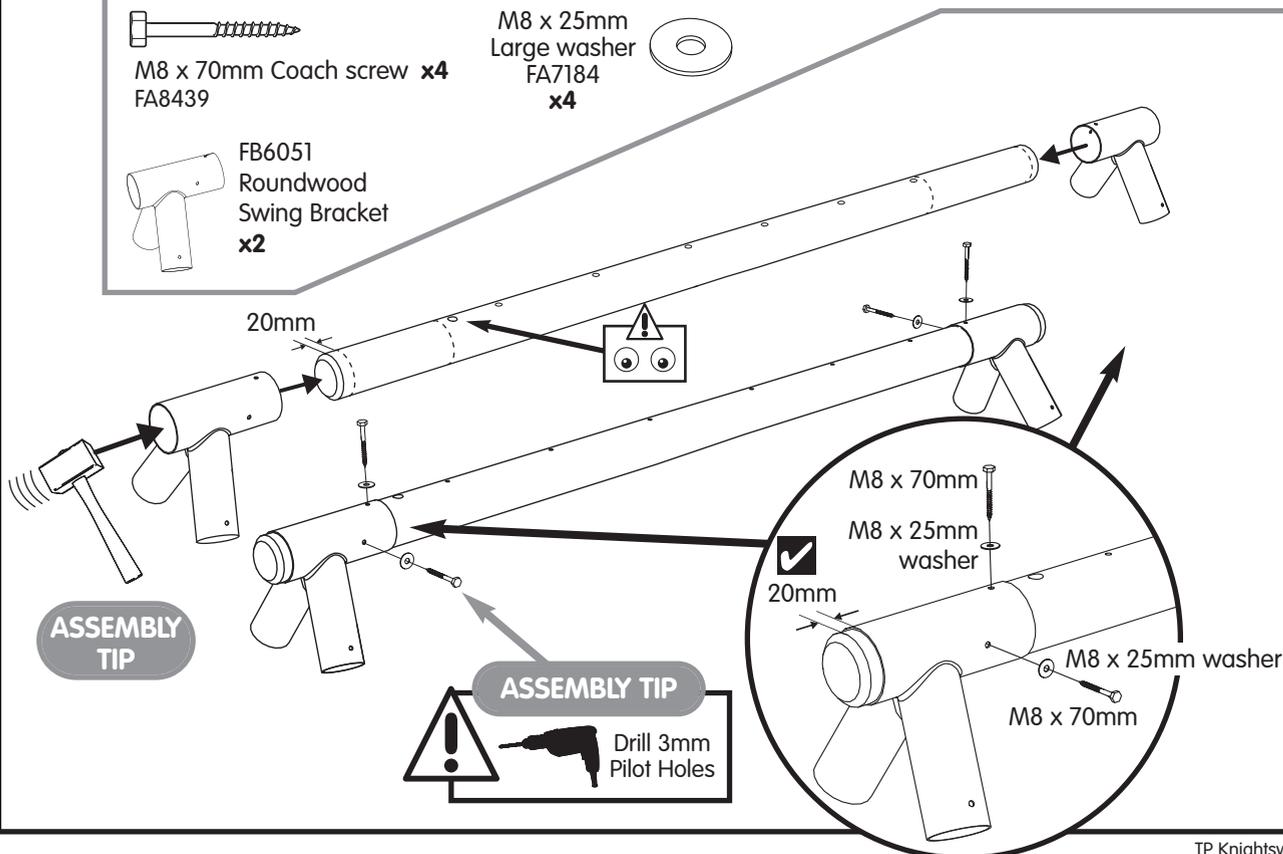

**Stage 3**

  **TP802 Double Knightwood Swing Frame**


- M8 Hook bolt **x4**  
FA9774 
- M8 x 25mm Large washer **x4**  
FA7184 
- M8 Nylon Insert Nut **x4**  
FA5174 

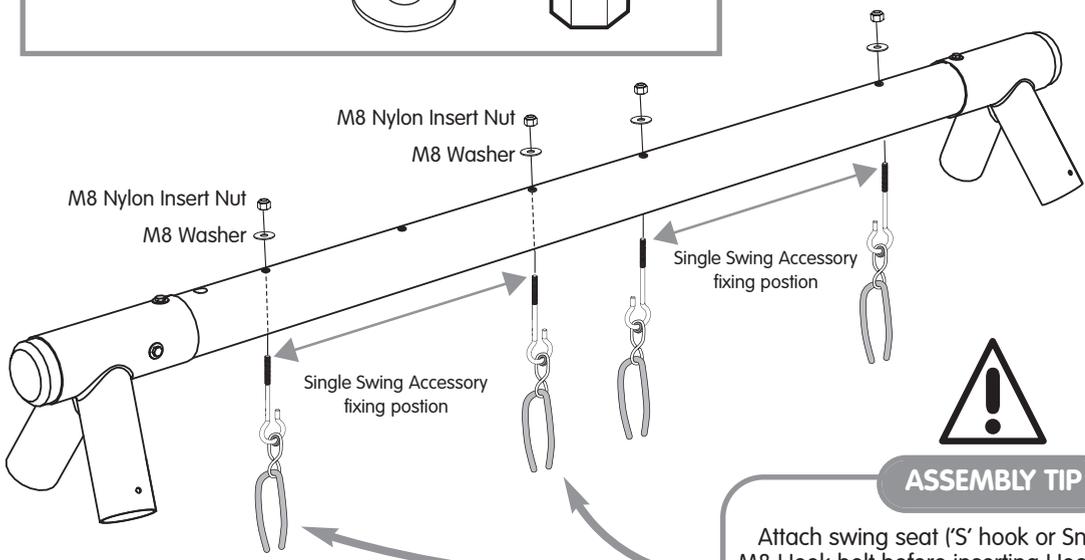


**Warning**


Refer to separate Swing accessory instructions for correct seat fixing eg: Hook Bolt or Duo Ride Brackets!

TP879 Skyride/TP933 Pirate Boat require TP774 Duo Ride Brackets (optional purchase).

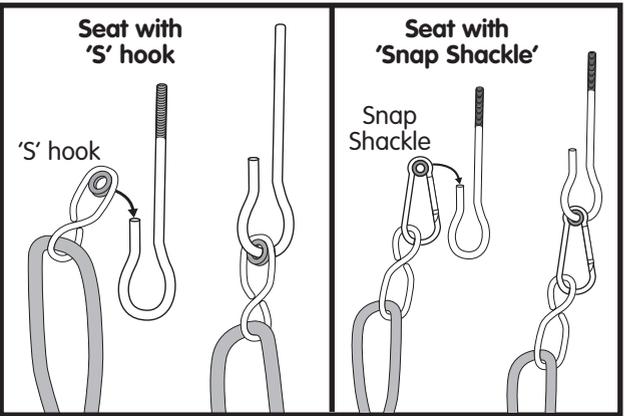

**ASSEMBLY TIP**

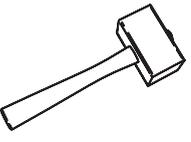 Use Mallet to firmly locate hook bolt in pilot hole

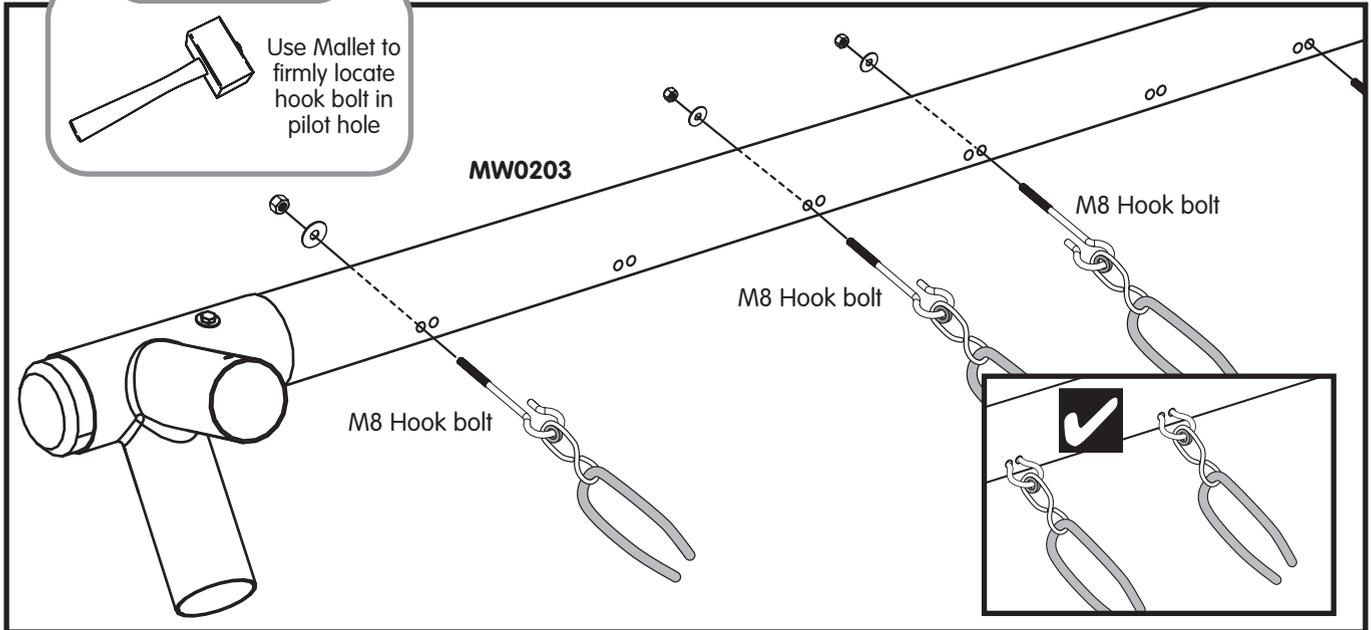

# Stage 1 TP803 Triple Knightswood Swing Frame

**TP800 - Pack 2**

- FB6051 Round Wood Swing Bracket **x2**
- PM1007 **x1**
- Ground Stakes PR5069 **x4**

**TP800 - Fixings SP0075**

- M8 Hook bolt FA9774 **x6**
- M8 x 25mm Large washer FA7184 **x18**
- M8 Nylon Insert Nut FA5174 **x6**
- M8 x 70mm Coach screw FA8439 **x16**
- 13mm x 10mm Spanner PR9554 **x1**

**TP803 - Pack 1**

- MW0201 Triple Round Wood Top Bar **x1**
- MW0200 Round Wood Leg **x2**


**TP801 - Pack 3**

- MW0200 Round Wood Leg **x2**
- MW0202 Round Wood Sidestay **x2**

## Contents - Please check

Contenu - Veuillez Vérifier  
 Siete Pregati di  
 Controllare il Contenuto  
 Verifique El Contenido  
 Inhalt - Bitte Überprüfen

**Tools - You will need:**  
 Vous aurez besoin de: Sie benötigen:  
 Avrete bisogno: Precisarà:  
 Vai precisar:

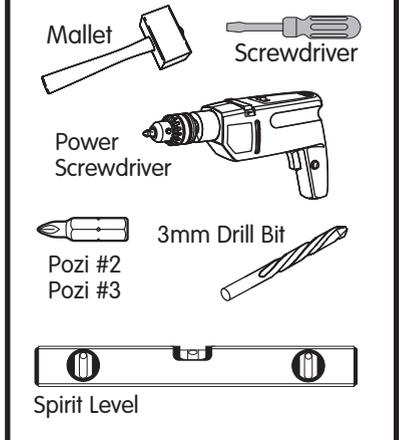


## Stage 2

MW0201 Triple Round Wood Top Bar **x1**

- M8 x 70mm Coach screw FA8439 **x4**
- M8 x 25mm Large washer FA7184 **x4**



- FB6051 Roundwood Swing Bracket **x2**

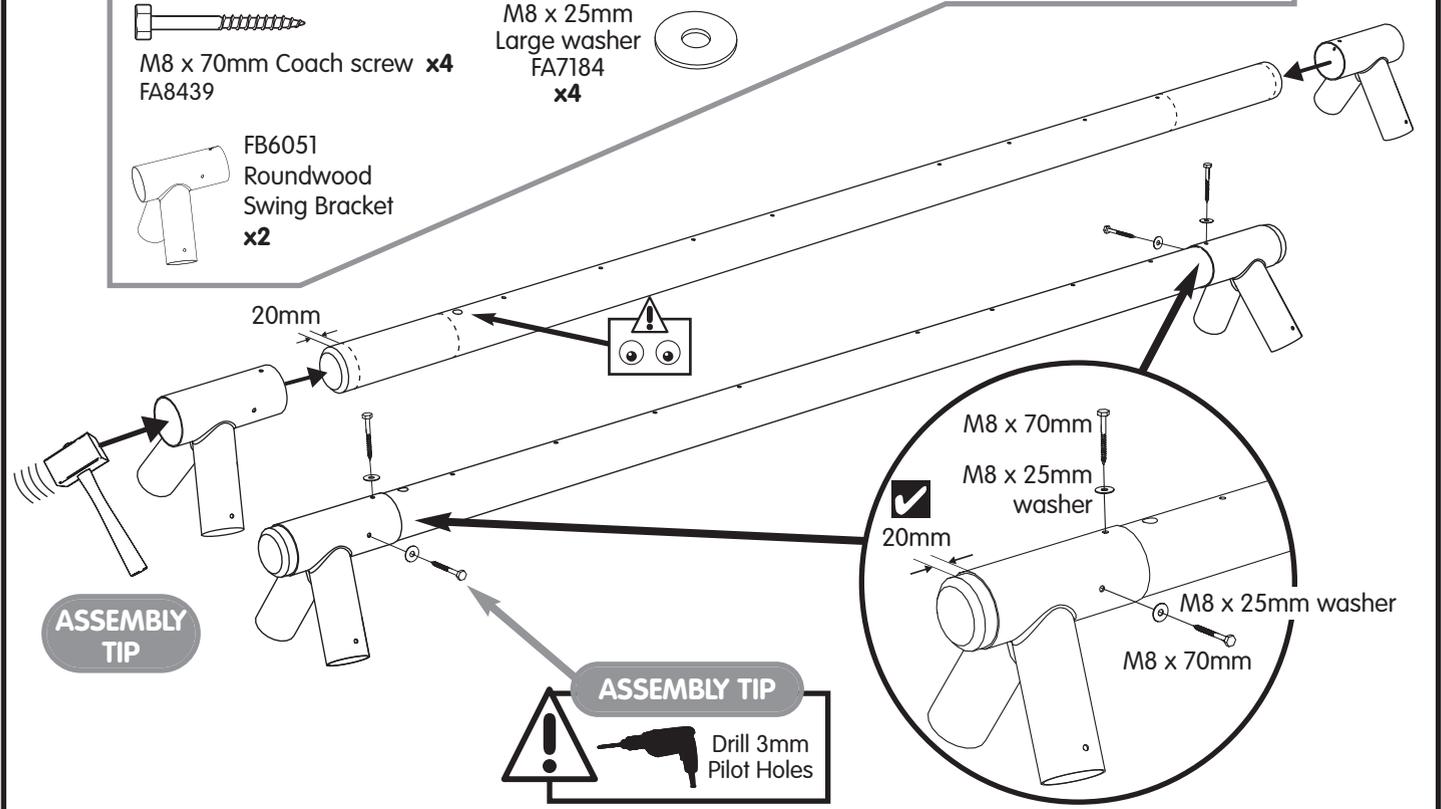


**ASSEMBLY TIP**

**ASSEMBLY TIP**  
 Drill 3mm Pilot Holes
  
# Stage 3 TP803 Triple Knightwood Swing Frame


- M8 Hook bolt x6  
FA9774 
- M8 x 25mm Large washer x6  
FA7184 
- M8 Nylon Insert Nut x6  
FA5174 

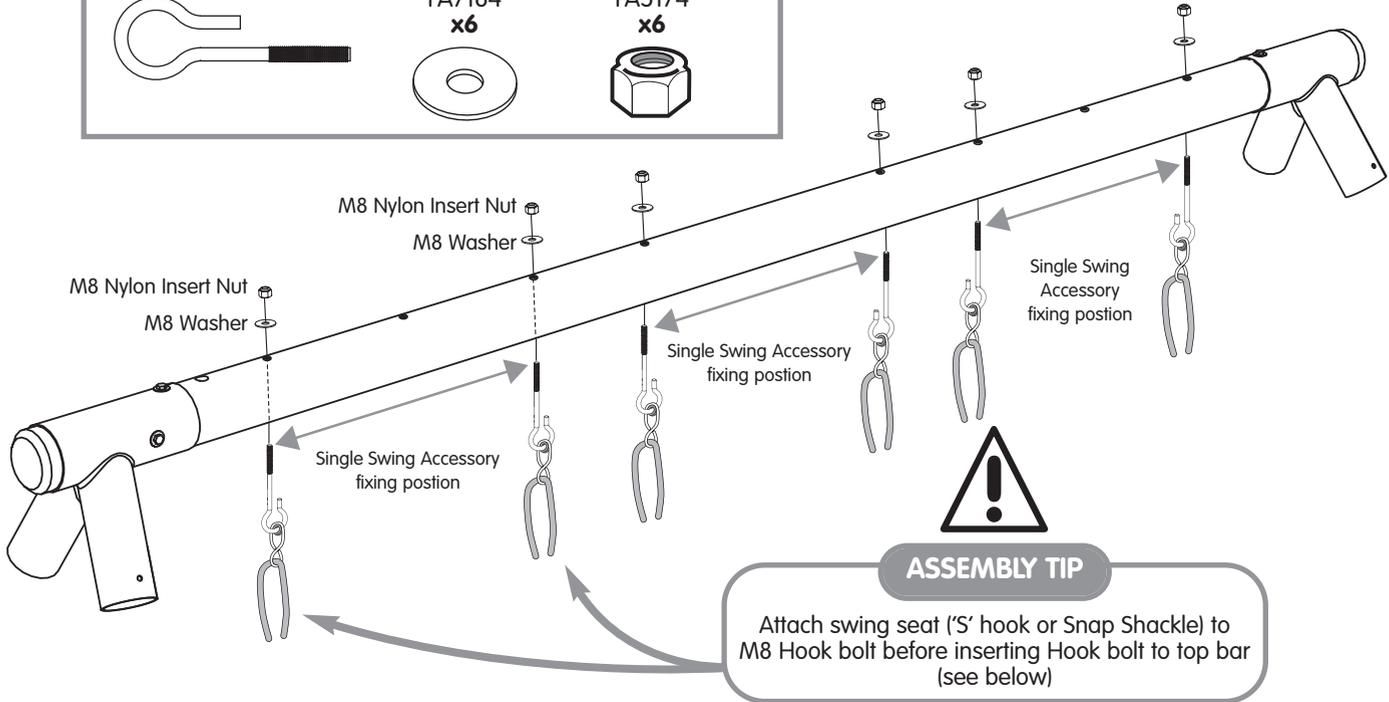


**Warning**


Refer to separate Swing accessory instructions for correct seat fixing eg: Hook Bolt or Duo Ride Brackets!

TP879 Skyride/TP933 Pirate Boat require TP774 Duo Ride Brackets (optional purchase).

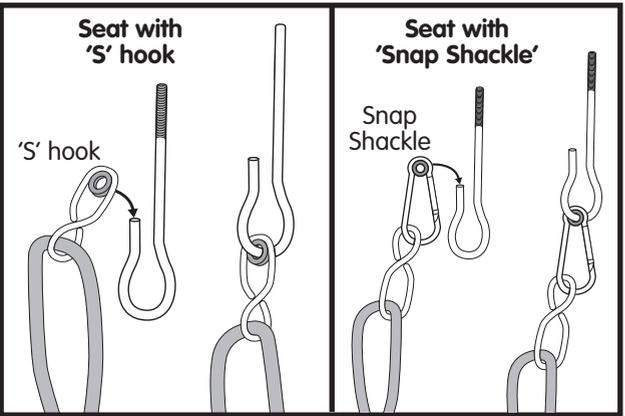

**ASSEMBLY TIP**

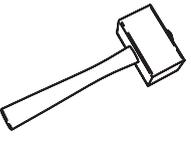
 Use Mallet to firmly locate hook bolt in pilot hole

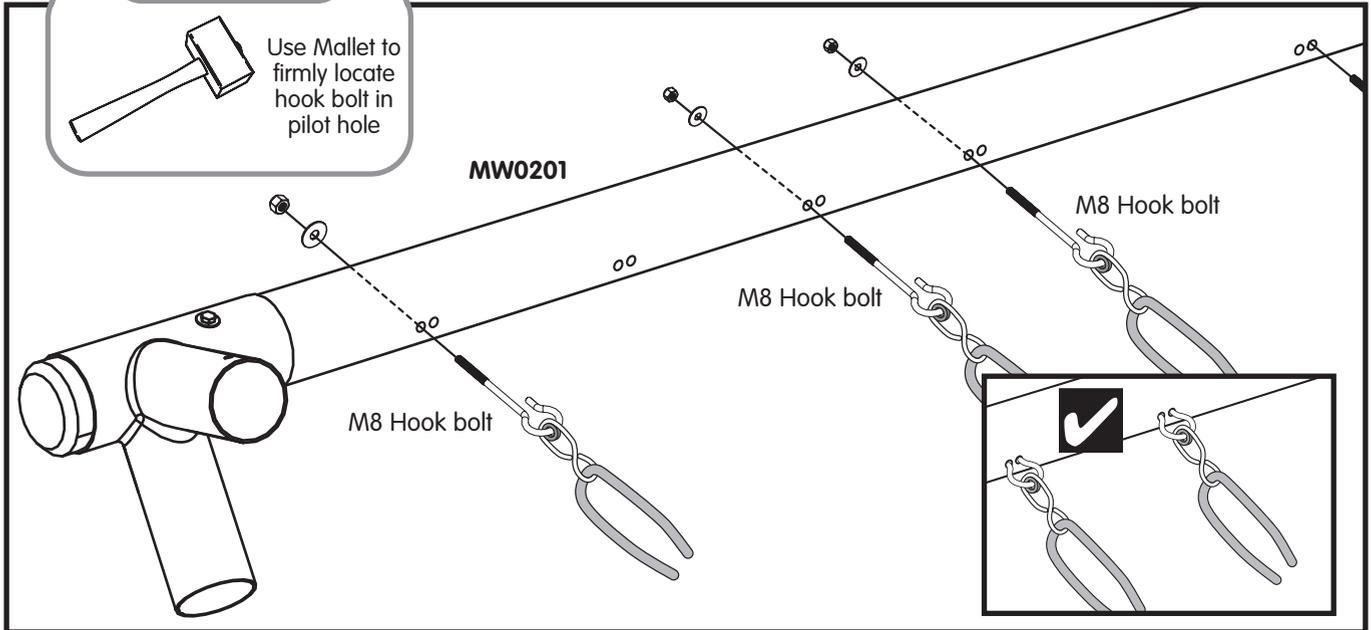

**Stage 4**



- TP804 Knightswood Single Swing Frame**
- TP802 Knightswood Double Swing Frame**
- TP803 Knightswood Triple Swing Frame**

 **MW0200 Round Wood Leg x4**



**M8 x 70mm Coach screw x4**  
FA8439

**M8 x 25mm Large washer**  
FA7184  
**x4**

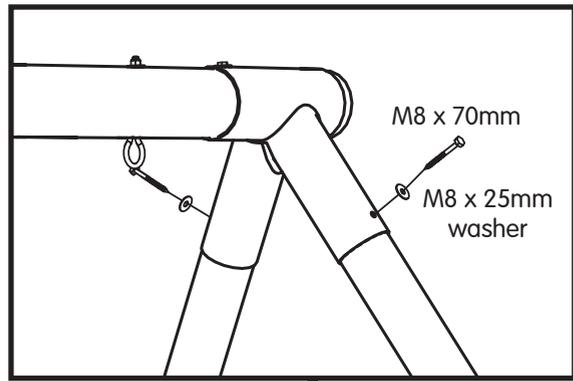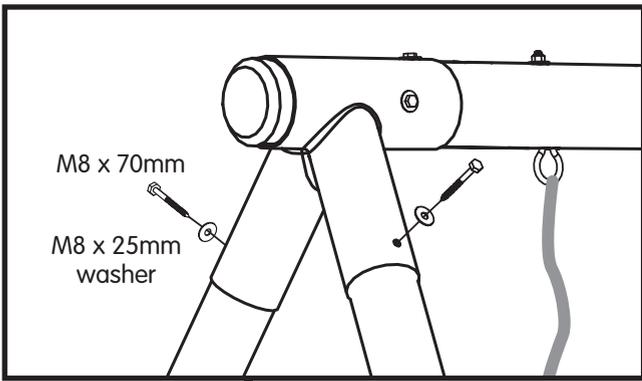


**TP804 Knightswood Single Swing Frame (not shown)**  
**TP802 Knightswood Double Swing Frame (not shown)**

**OR**


**TP803 Knightswood Triple Swing Frame (shown)**



**ASSEMBLY TIP**

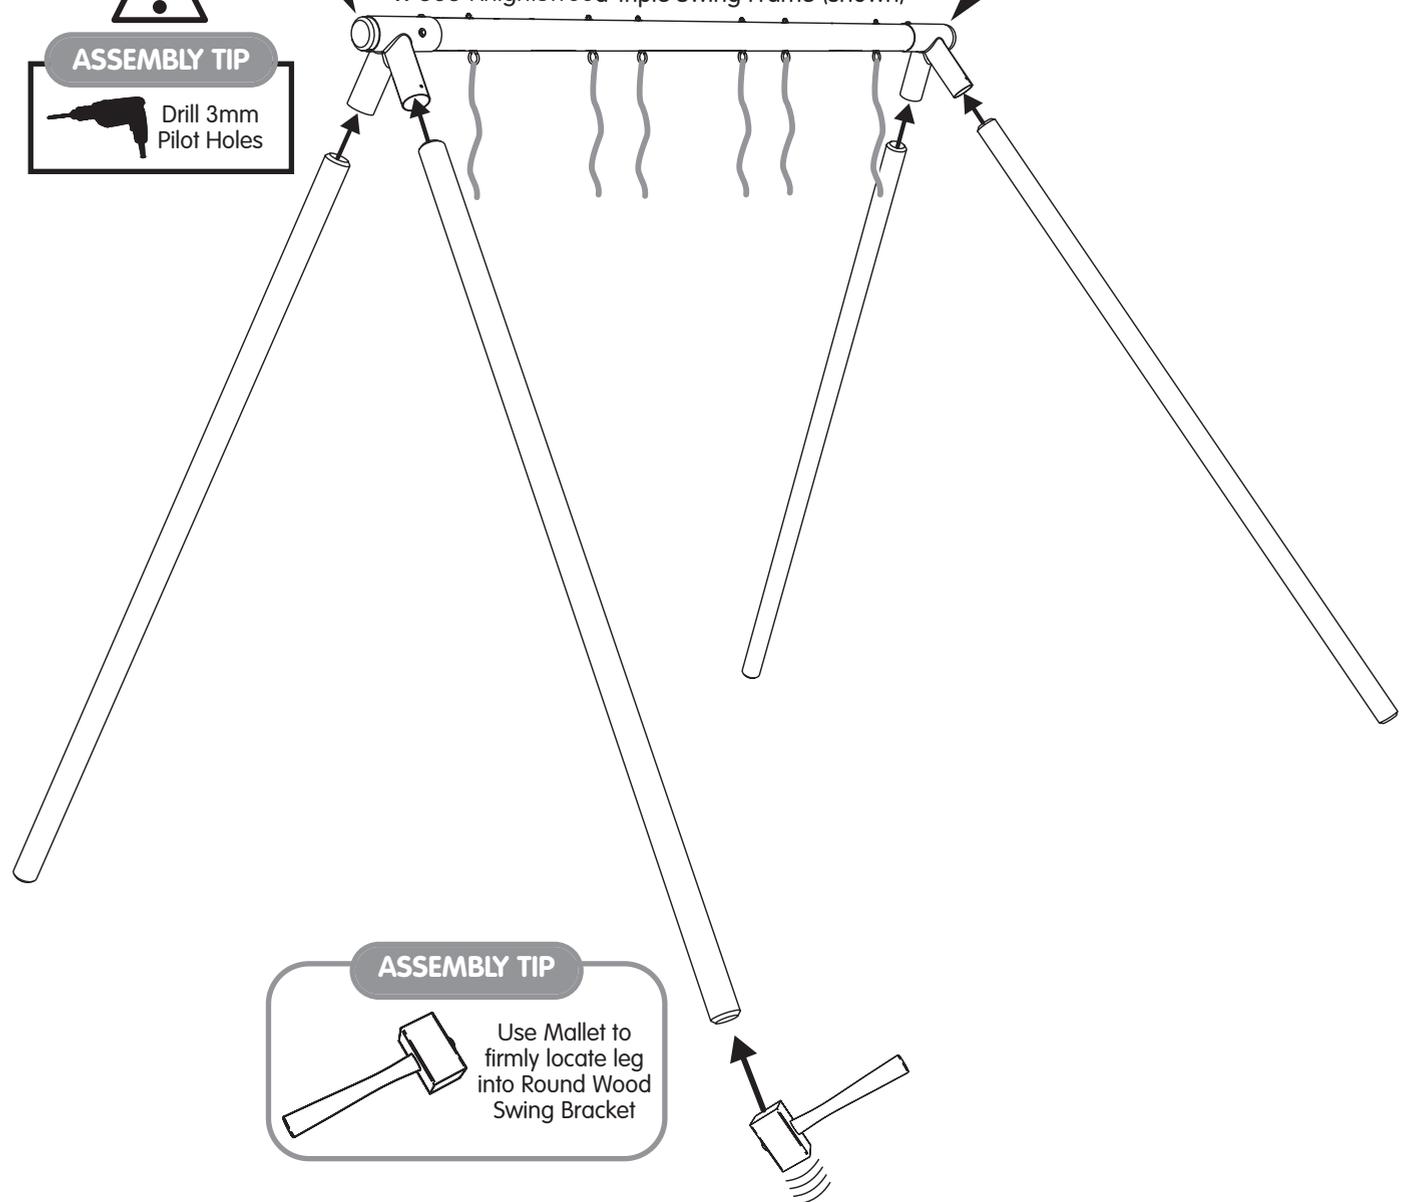

**ASSEMBLY TIP**

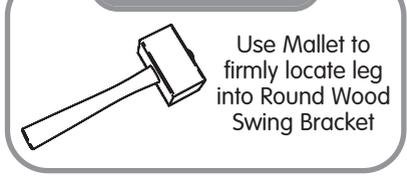

**Stage 5**

- TP804 Knightswood Single Swing Frame
- TP802 Knightswood Double Swing Frame
- TP803 Knightswood Triple Swing Frame

**MW0202** Round Wood Sidestay **x2**

M8 x 25mm  
Large washer  
FA7184  
**x4**



M8 x 70mm Coach screw  
FA8439  
**x4**

PM1007 **x1**

TP804 Knightswood Single Swing Frame (not shown)  
TP802 Knightswood Double Swing Frame (not shown)

**OR**

TP803 Knightswood Triple Swing Frame (shown)

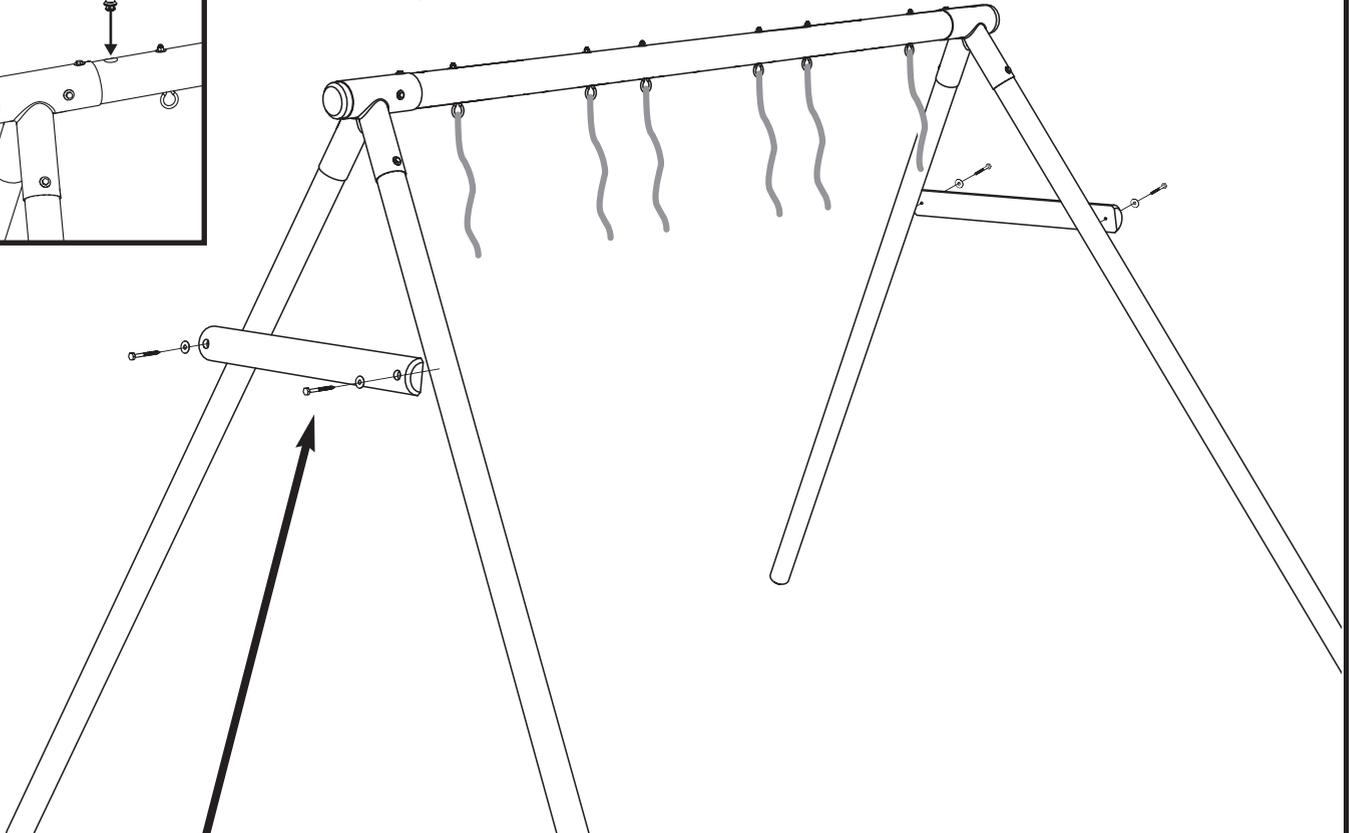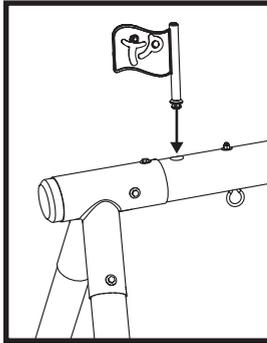

**ASSEMBLY TIP**

Drill 3mm Pilot Holes

**ASSEMBLY TIP**


M8 x 70mm M8 x 25mm washer



**ASSEMBLY TIP**

Make sure that the fixing points are centred on the legs.

**Stage 6**  
**TP804 Knightswood Single Swing Frame**  
**TP802 Knightswood Double Swing Frame**  
**TP803 Knightswood Triple Swing Frame**

 **Staking**



-  M8 x 70mm Coach screw **x4**  
FA8439
-  Ground Stakes **x4**  
PR5069

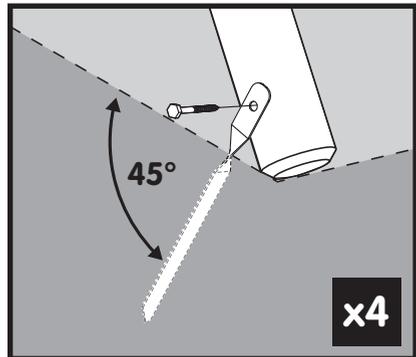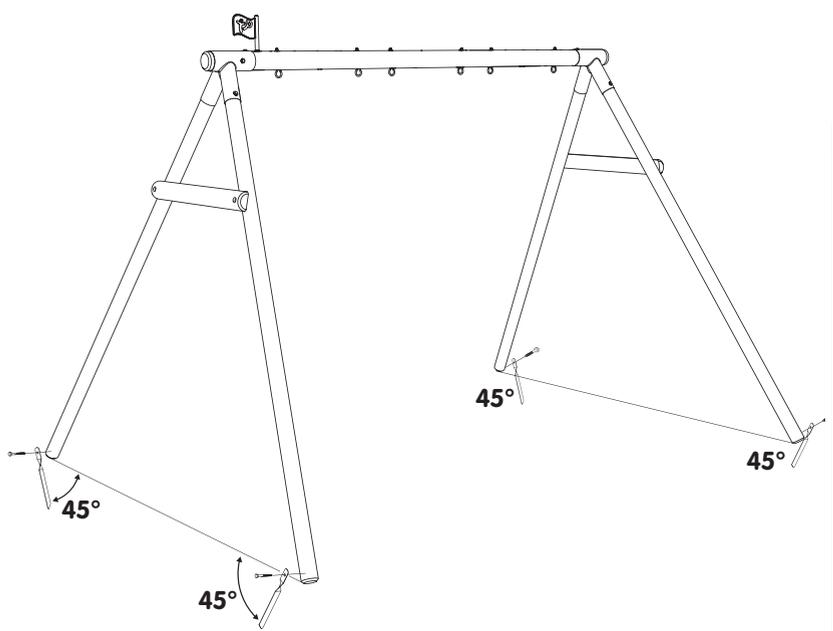

**ASSEMBLY TIP**

 Drill 3mm Pilot Holes

**Staking into concrete**

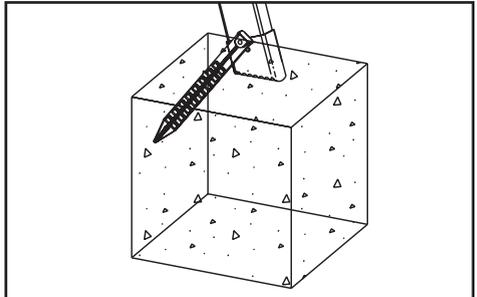
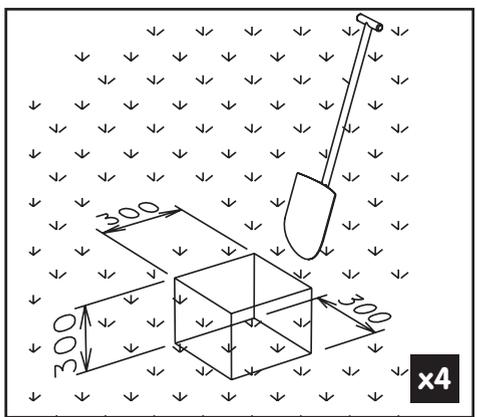


Set the stakes in concrete (as shown).  
 Never set the legs of the playset in concrete.

**Stage 7**  
**TP804 Single Knightswood Swing Frame**  
**TP802 Double Knightswood Swing Frame**  
**TP803 Triple Knightswood Swing Frame**

**!**

Refer to separate accessory instructions for correct seat fitting.

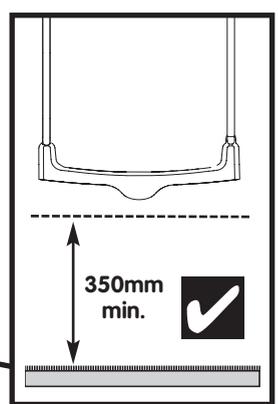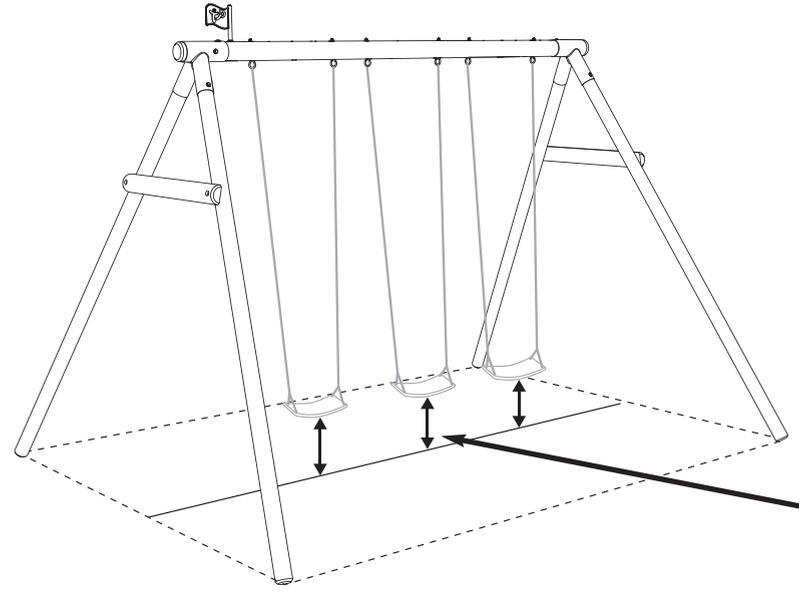


Stage  
**8**

TP804 Knightswood Single Swing Frame

TP802 Knightswood Double Swing Frame

TP803 Knightswood Triple Swing Frame

## Freespace/Safe Play Diagram

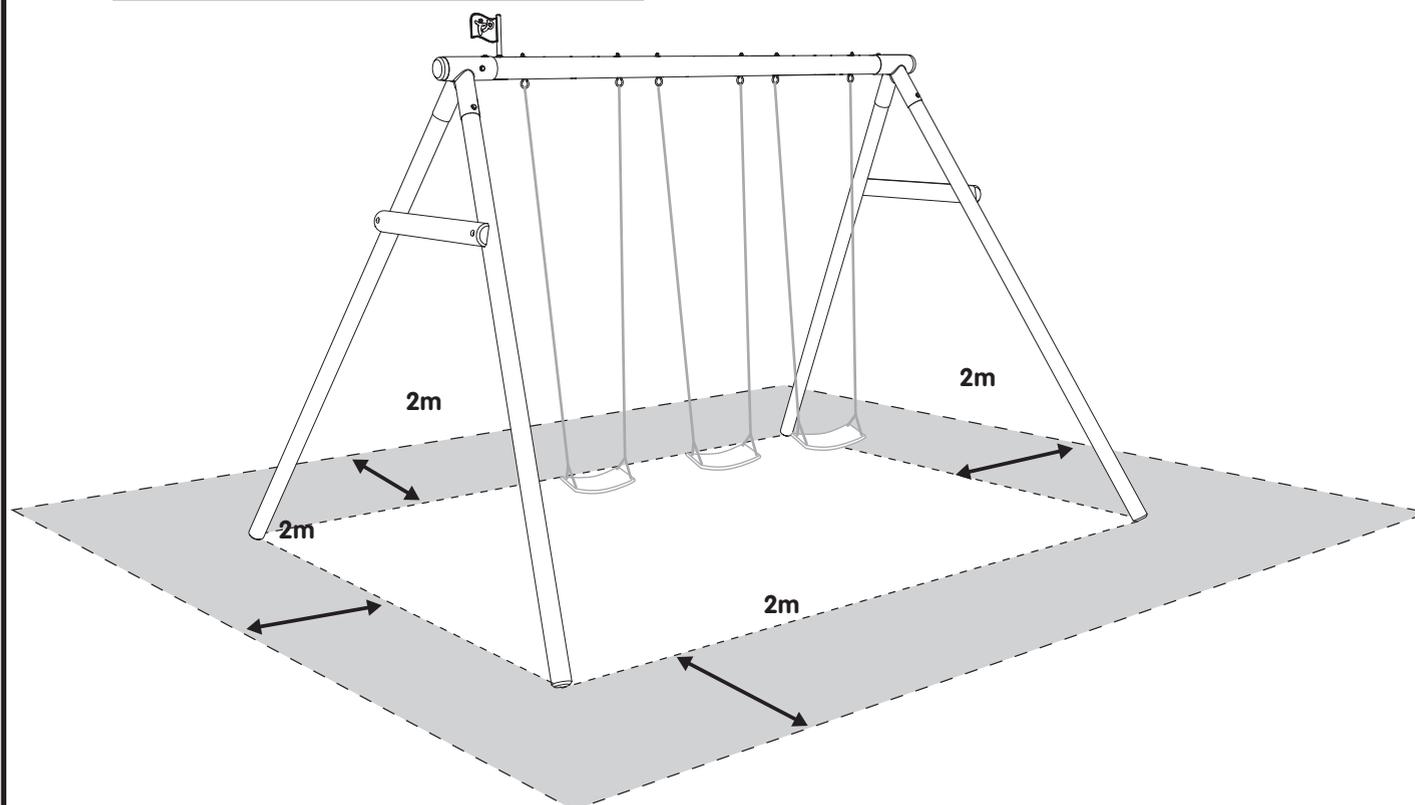

### Recommended Free Space:

The Safe Play Area refers to the zone extending 200cm (2 metres) beyond the toy on all sides and 700cm (7 metres) above the toy. The Safe Play Area must be free from all structures, landscaping, trees and branches, rocks, wires, sprinkler heads and other similar obstacles to safe play. Children can be seriously injured running or colliding into such obstacles.

### Aire de sécurité recommandée:

L'aire de sécurité se réfère à la zone située dans un rayon de 2 m tout autour du jeu, y compris l'espace situé au-dessus de ce dernier. L'ajout d'accessoires est susceptible d'étendre cette aire de sécurité. La surface au sol doit être bien plane. Installé sur un terrain en pente, ce jeu pourra pencher ou s'endommager. Les composants seront alors soumis à des tensions plus importantes, ce qui risque de diminuer leur durée de vie. L'aire de sécurité ne doit pas comporter de structures, aménagements paysagers, arbres et branches, pierres, câbles, têtes d'arrosage ou autres obstacles susceptibles d'empêcher les enfants de jouer en toute sécurité. Les enfants pourraient heurter ces obstacles en courant ou en se balançant et ainsi se blesser grièvement.

### Area di gioco sicura raccomandata:

L'Area di giuoco sicura si riferisce alla zona che si estende per 2 m su tutti i lati oltre l'insieme da gioco, incluso lo spazio al di sopra dell'apparato. Gli accessori aggiuntivi possono estendere le dimensioni dell'Area di gioco sicura. La superficie del terreno deve essere in pari. Installando l'insieme da gioco sul terreno in pendenza, può inclinarsi o 'stirarsi'. Ciò sottoporrebbe tutti i componenti a sforzo addizionale, e potrebbe comprometterne la durata. L'Area di gioco sicura deve essere libera da strutture, variazioni del terreno, alberi e rami, pietre, fili metallici, testine per annaffiare e tutto quanto esporrebbe a rischio la sicurezza del gioco. Correndo contro questi ostacoli, o urtandovi durante l'oscillazione, i bambini potrebbero ferirsi seriamente.

### Área Segura de Juego recomendada:

El Área Segura de Juego se refiere a la zona que se extiende hasta 2m desde los juegos todo alrededor, incluyendo el espacio encima del aparato. Accesorios adicionales pueden aumentar el tamaño del Área Segura de Juego. La superficie del suelo debe ser uniforme. Si instala sus juegos sobre un terreno con declive, har que se inclinen o se "arruinen". Esto coloca tensión adicional sobre todos los componentes y puede acortar su vida útil. El Área Segura de Juego debe estar libre de todo tipo de estructuras, arquitectura paisajista, árboles y ramas, rocas, cables, boquillas de aspersores y cualquier otro elemento que pueda obstaculizar el juego seguro. Los niños pueden herirse gravemente con estos obstáculos al correr o columpiarse.

### Empfohlene sichere Spielfläche:

Die sichere Spielfläche erstreckt sich an allen Seiten 2 m über das Spielgerät hinaus, einschließlich Raum über dem Gerät. Zubehör kann die sichere Spielfläche erweitern. Der Boden muss eben sein. Wenn Sie das Spielgerät auf einem Hang installieren, kann es sich lehnen oder verziehen. Dadurch werden alle Teile zusätzlicher Last ausgesetzt, was zu verkürzter Lebensdauer führen kann. Im sicheren Spielraum darf sich nichts befinden, das sicheres Spielen behindern könnte wie z.B. Aufbauten, Gärten, Bäume oder Büsche, Steine, Draht, Rasensprinkler oder ähnliches. Wenn Kinder in solche Hindernisse hineinlaufen oder -schaukeln, können sie sich schwer verletzen.

### Área de Actividades Segura Recomendada

A Área de Actividades Segura Recomendada refere-se à zona que se estende por 2 m em todas as direcções à volta dos elementos de diversão, incluindo o espaço acima dos mesmos. Acessórios adicionais poderão aumentar o tamanho da Área de Actividades Segura. A superfície do terreno deve ser nivelada. A instalação do parque infantil em terreno com declives pode fazer com que este fique inclinado ou "deformado". Isto coloca tensão adicional em todas as ligações e juntas e, com o passar do tempo, faz com que estas cedam. Para que a Área de Actividades seja segura, não deverá haver outras estruturas, áreas ajardinadas, árvores e ramos, rochas, fios, aspersores ou outros obstáculos semelhantes à superfície. As crianças poderão sofrer graves ferimentos pessoais se, ao correrem ou baloiçarem, caírem de encontro a estes elementos.



## Register your new TP product on line now at [www.tptoys.com/product registration](http://www.tptoys.com/product-registration)

Thank you for purchasing this TP product. To find out all about your product guarantee and register your purchase, please visit [www.tptoys.com/productregistration](http://www.tptoys.com/productregistration).

We want to give you the very best service. By registering your purchase now, we will be able to deal with any guarantee issues very quickly and efficiently in the future. Thank you.

**Your TP Guarantee Number/Product Batch No is**

Designed in the UK by **Robovision Ltd t/as TP Toys**  
Unit 11, Enterprise Way, Flitwick, Bedfordshire, MK45 5BX.

[www.tptoys.com](http://www.tptoys.com)