TP885 Alaska TP886 Galapagos TP887 Fiordland



Instructions for assembly, maintenance and safe use. Please retain for future reference.







TP885 Alaska

TP886 Galapagos

TP887 Fiordland



THIS PRODUCT CONTAINS SMALL PARTS AND IS NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS. CONTAINS SMALL PARTS. CHOKING HAZARD.

ONLY FOR DOMESTIC USE. FOR OUTDOOR USE.

TOY MUST BE ASSEMBLED BY AN ADULT BEFORE USE.

ADULT SUPERVISION IS REQUIRED

CHILDREN MUST NOT USE THE EQUIPMENT UNTIL PROPERLY INSTALLED.

REMOVE ALL PACKAGING BEFORE GIVING TO YOUR CHILDREN.

THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 12 YEARS.

ANCHORS THAT ARE SUPPLIED WITH THIS PRODUCT MUST BE FITTED BEFORE USE.

MAXIMUM COMBINED USER WEIGHT FOR SWING FRAMES 200KGS

TP885 ALASKASINGLE SEAT USER WEIGHT - 60KGS
GLIDE RIDE USER WEIGHT - 35KGS PER SEAT **TP886 GALAPAGOS**SINGLE SEAT USER WEIGHT - 60KGS
GLIDE RIDE USER WEIGHT - 35KGS PER SEAT

TP887 FIORDLAND NEST SWING USER WEIGHT - 120KGS










Robovision Ltd t/a TP Toys

Unit 11, Enterprise Way, Flitwick, Bedfordshire, MK45 5BX England


www.tptoys.com

Important advice for assembly, maintenance and safe use

- 1. Toys must be assembled by an adult before use exactly in accordance with the instructions.
- 2. Check all parts are present before you start to assemble the product.
- 3. Place small parts on a tray or similar, to ensure they are not lost.
- 4. If any parts are missing do not use the product until the replacement parts are fitted.
- 5. Remove all packaging before giving to your children or allowing them to play with this product.
- 6. Ensure your product is sited on level ground. Failure to do this may put additional stress on connections and joints and in time could cause them to fail.
- 7. Ensure your product is located on a soft impact surface like grass. Never locate your product on hard surfaces like concrete or asphalt.
- 8. Children must not use this product until properly installed.
- 9. Adult supervision is required at all times to ensure children play safely. Ensure children's clothing is appropriate for the play activity.
- 10. Equipment should be checked by an adult at the beginning of each season and at regular intervals during the usage season to ensure it is safe.
- 11. Pay special attention to all connections and fastenings.
- 12. Parts may need to be replaced if they show signs of wear and tear. Replace any defective parts in accordance with these instructions.
- 13. Any changes to this toy, e.g. changing or adding an accessory, must be done in accordance with our instructions. Failure to do this will render your guarantee null and void and may make your product unsafe.
- 14. The age recommendation for this product is clearly stated on the packaging and these instructions. Please adhere to it at all times.
- 15. When you dispose of this equipment please do so responsibly.

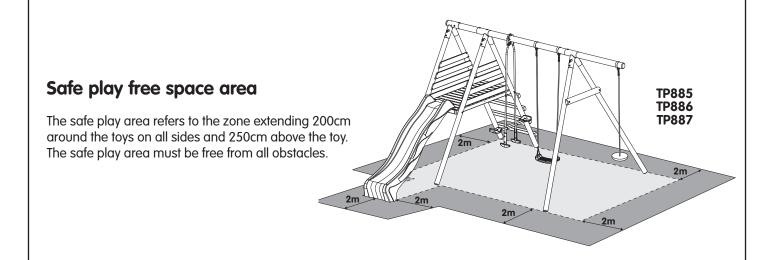

Dimensions

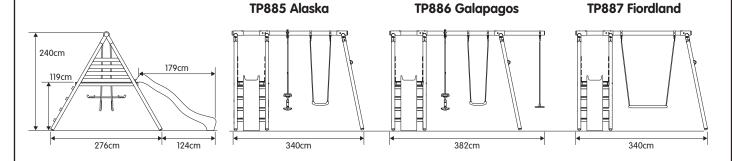



Know Your TP Round Wood.

Timber is a very popular choice for active outdoor toys. For reasons of affordability and the environment, all wood playset manufacturers use softwood rather than hardwood. Each piece of timber is unique, bearing its own knots, cracks and variations in colour.

Round timbers tend to come from younger smaller trees and are complete tree poles, stripped of any bark and other rough materials but subject to no further processing apart from the application of a suitable environmentally friendly preservative.


Our round wood frames are rustic in appearance. The heartwood that they are made from naturally has cracks and splits. Theses cracks will change over time due to atmospheric conditions. When wet, the wood will take in water, swell and the cracks will close up (not disappear), when dry the wood contracts and the cracks will open up.


Whilst this can sometimes seem alarming, the round timber frames are designed and dimensioned to ensure these natural characteristics do not have an impact upon the structural integrity of the frame. All of our wooden play frames are rigorously tested by an independent test house and fully comply with the relevant toy safety regulations.

Because of the natural characteristics of such wood products, it is vital that parents check their play frame regularly to identify any splintering or lifting of the surface layers of the wood or any exposure of rough wood due to changes in cracks and splits. Affected areas must be rubbed down using coarse sandpaper to restore a smooth. Safe surface.

Very occasionally these characteristics can develop to a point where replacing the pole may be required. This can be if a crack is in a particular position or if a crack exceeds certain parameters. Examples of this are:

- Where cracks open up in excess of 5mm in width.
- Where cracks of a significant width extend over half the total length of the timber.
- Where cracks run through fixing points.

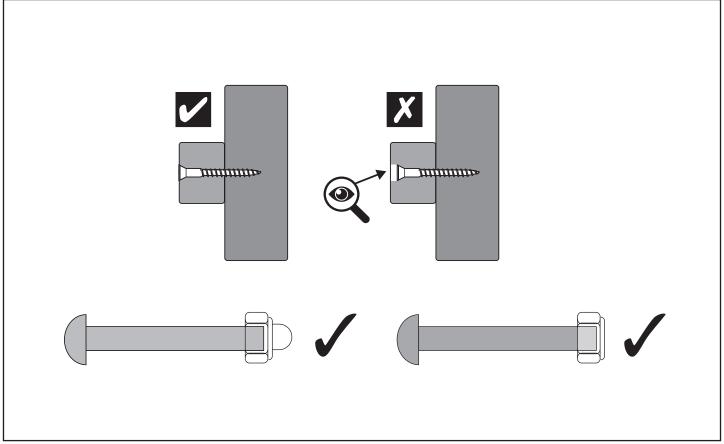


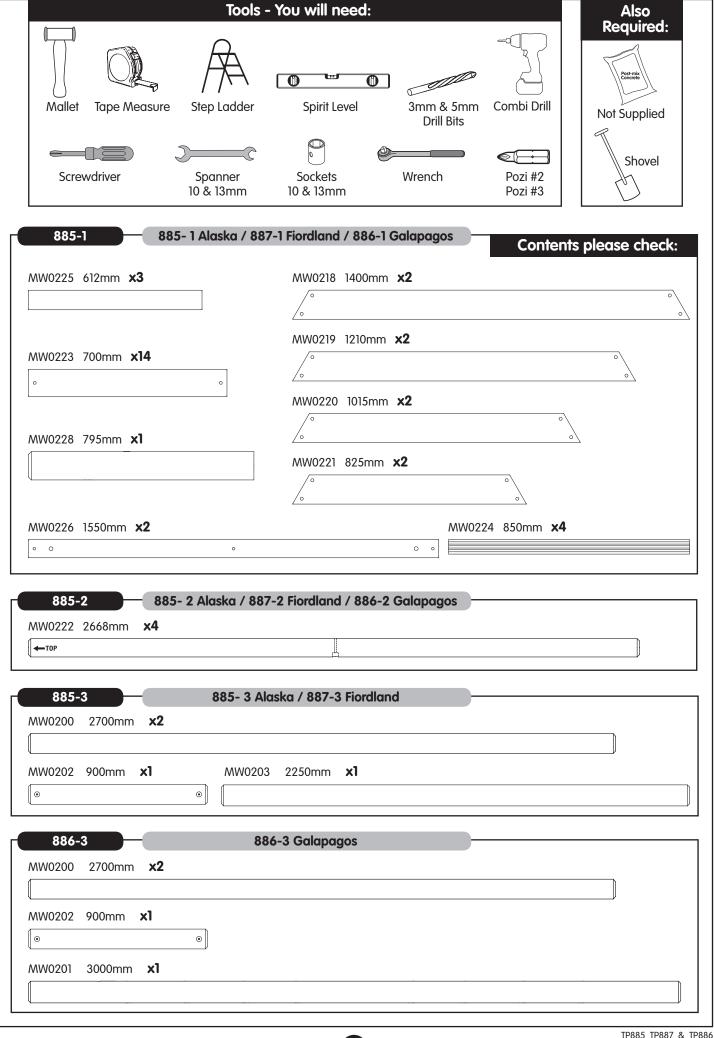

885-4 / 886-4 / 887-4

885- 4 Alaska / 887-4 Fiordland / 886-4 Galapagos


Please note: There may be some fixings left over after the assembly build. PM1968 4.5 x 40mm FA4517 5 x 60mm FA9768 x60 PM1007 xl 5 x 80mm FA4521 6 x 155mm FA9784 **x6** 4 x 16mm FA4527 PM8387 **x8** x18 M8 x 120mm FA9771 **x4** M8 x25mm M8 FA8440 FA5174 **x28 x4** 70mm FA8439 40mm FA8380 x20 x4

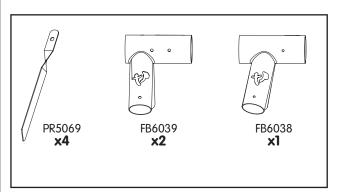




 Swing Accessories Swing Seats supplied vary depending on product purchased.






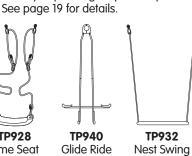



TP885 x2 TP887 x2


TP886 x3

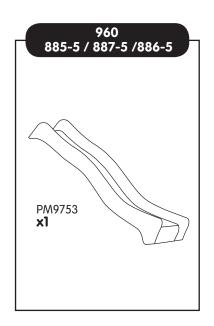



TP885 TP887 TP886 - Deck Assembly

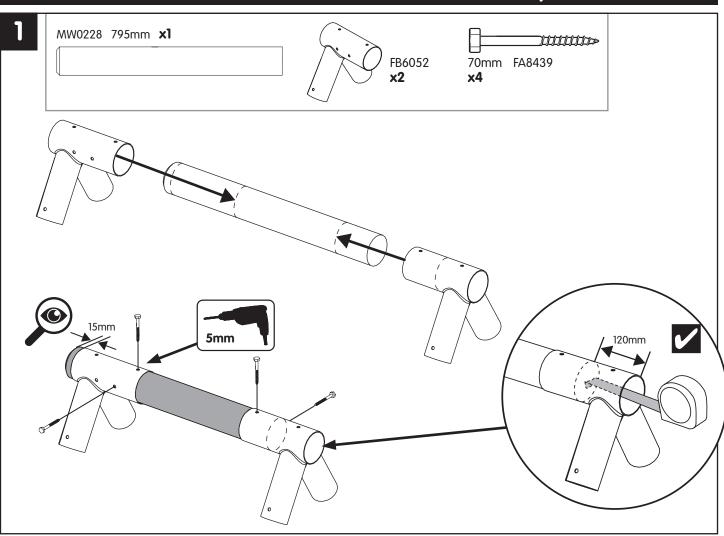


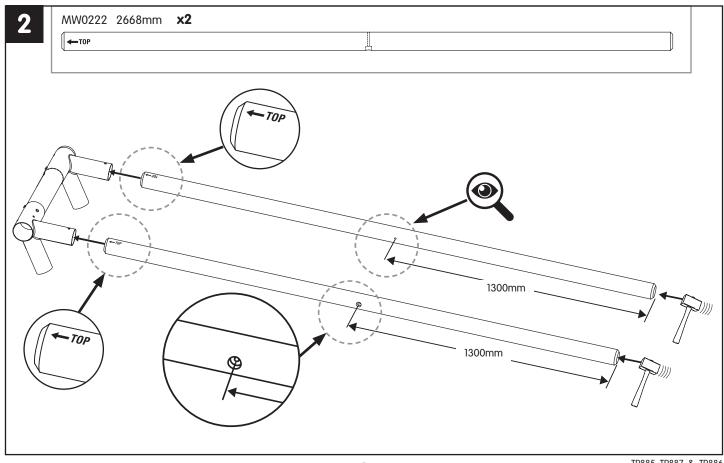


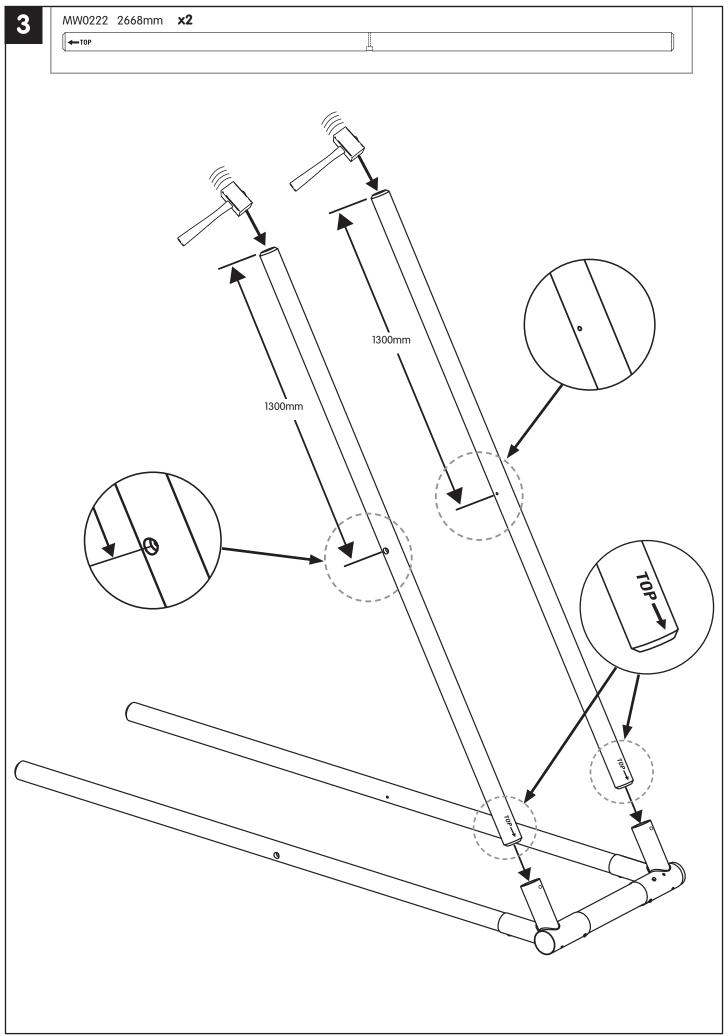


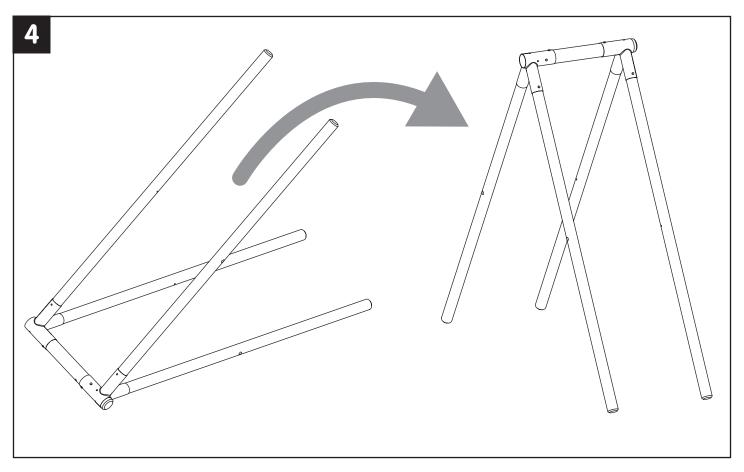


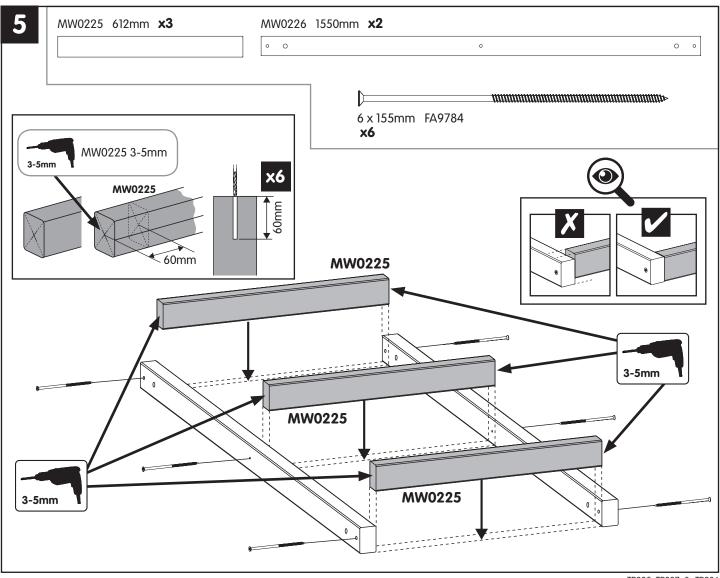


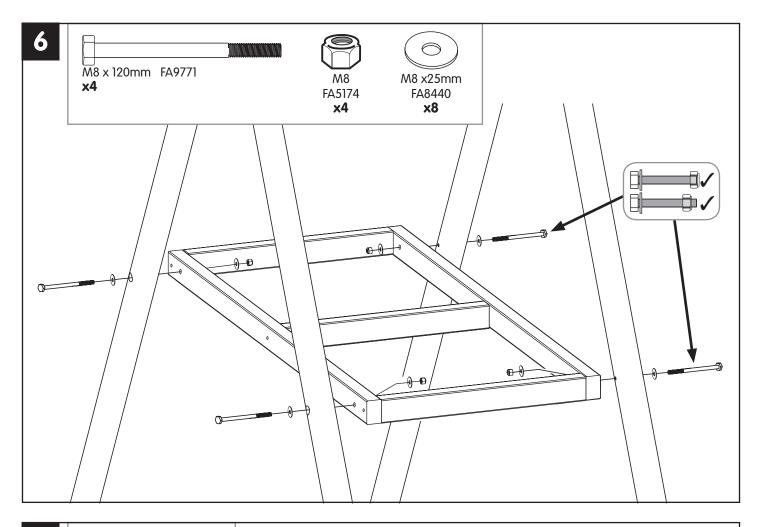


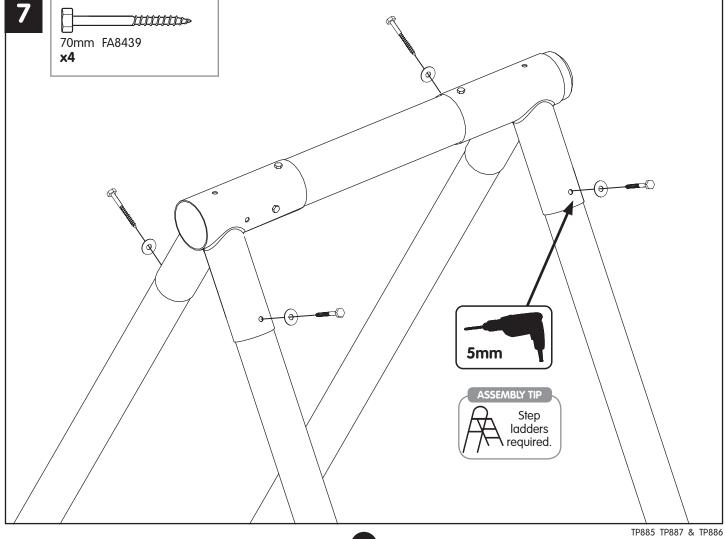

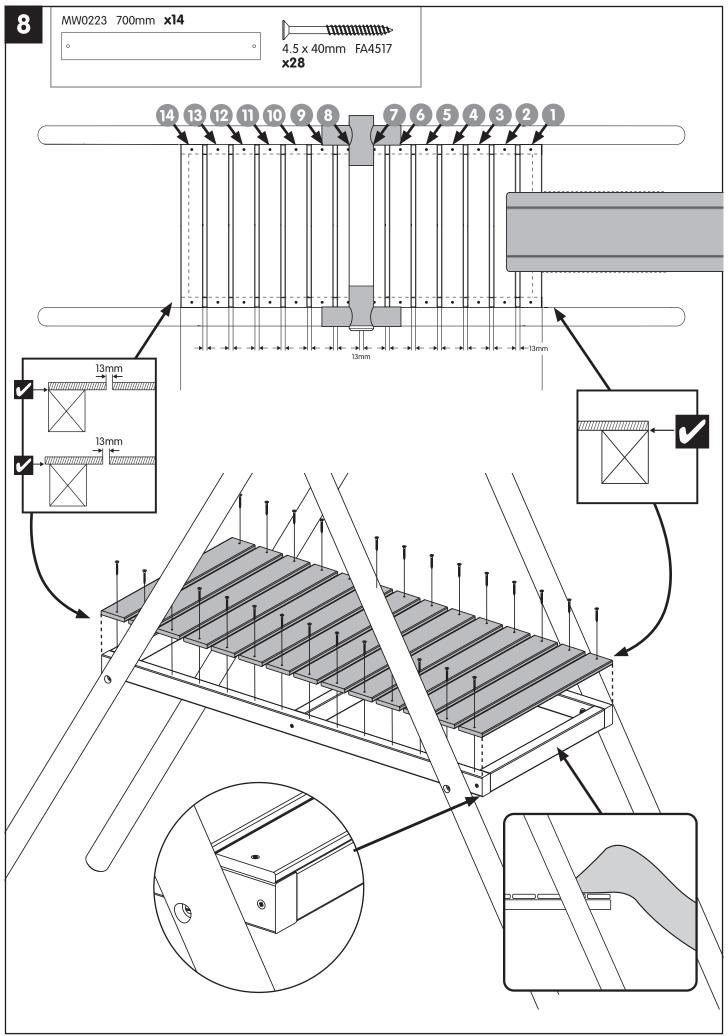


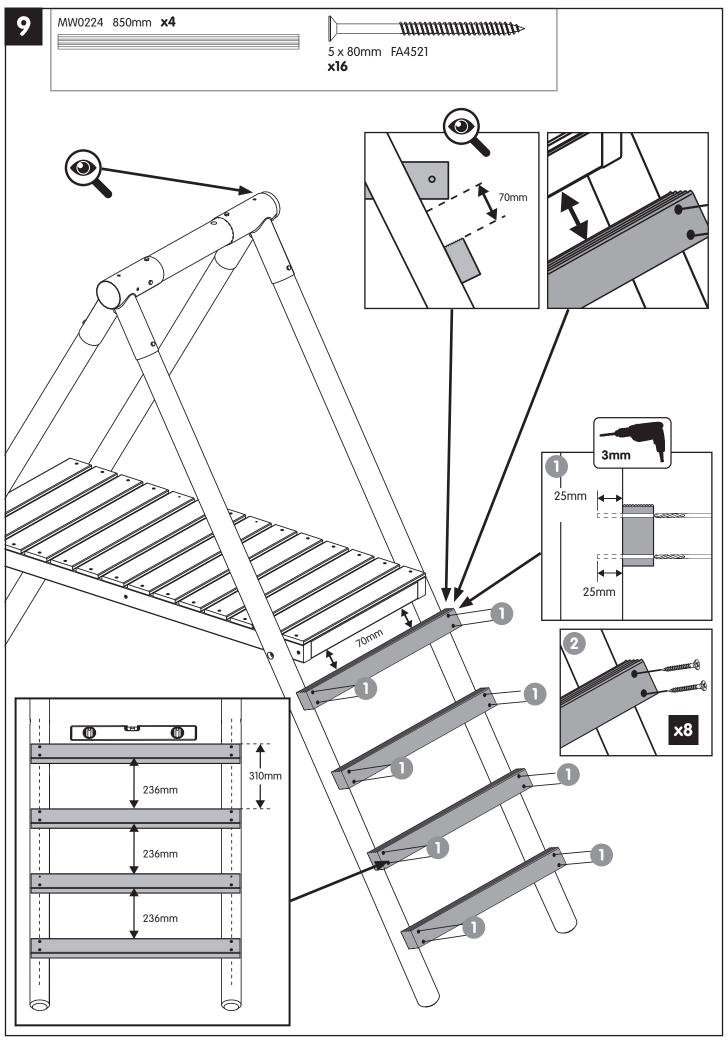


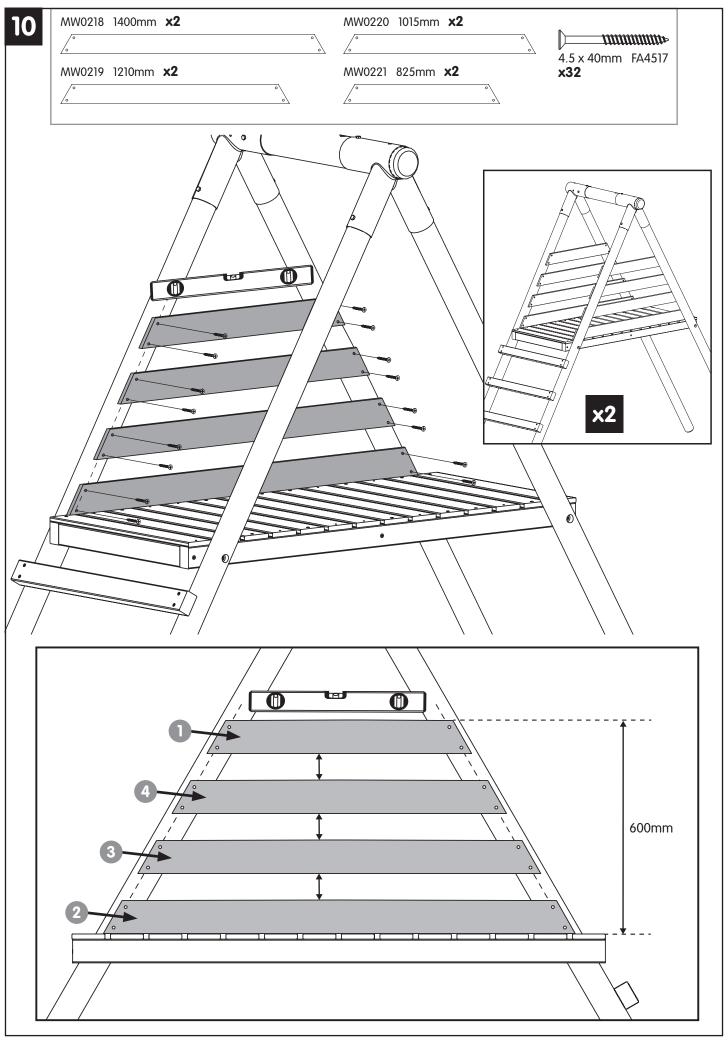

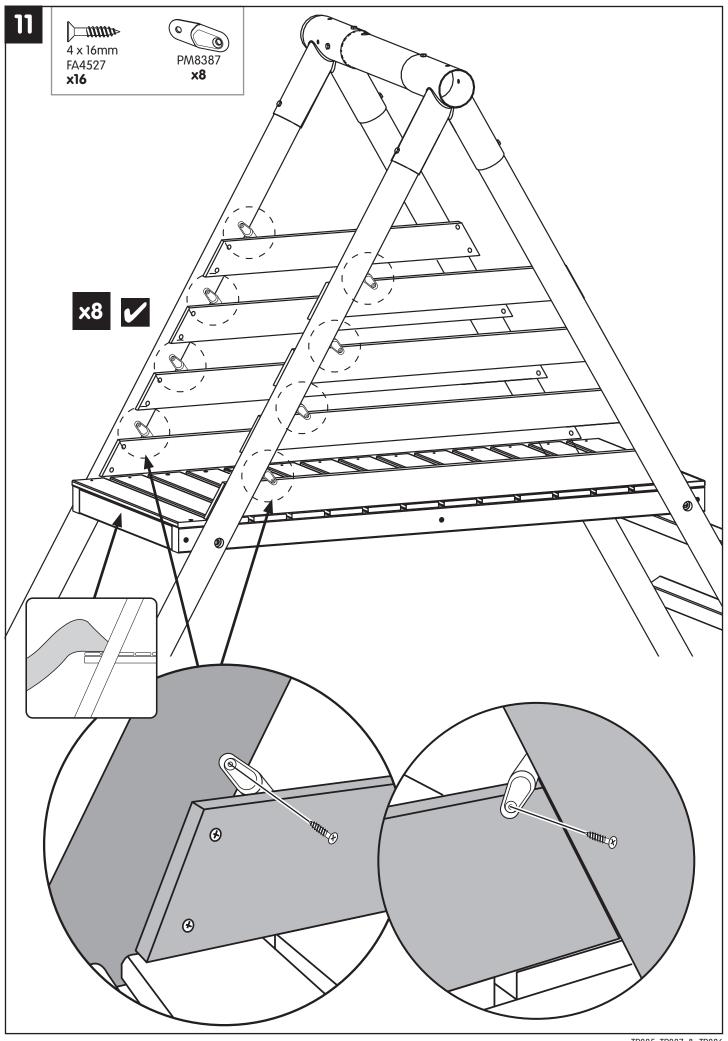

TP885 TP887 TP886 - Swing Arm Assembly

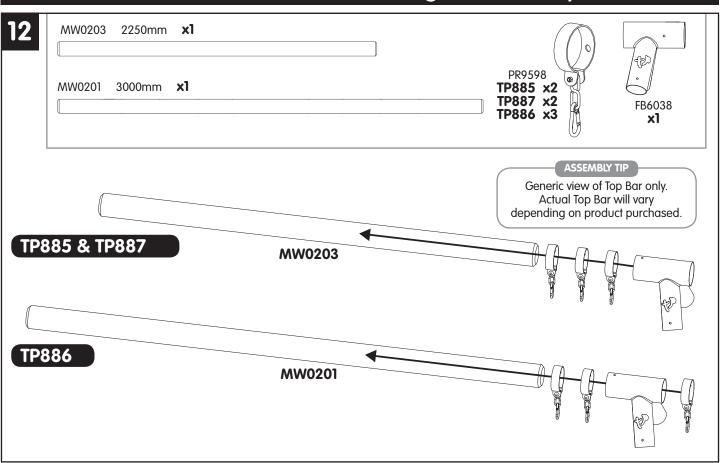

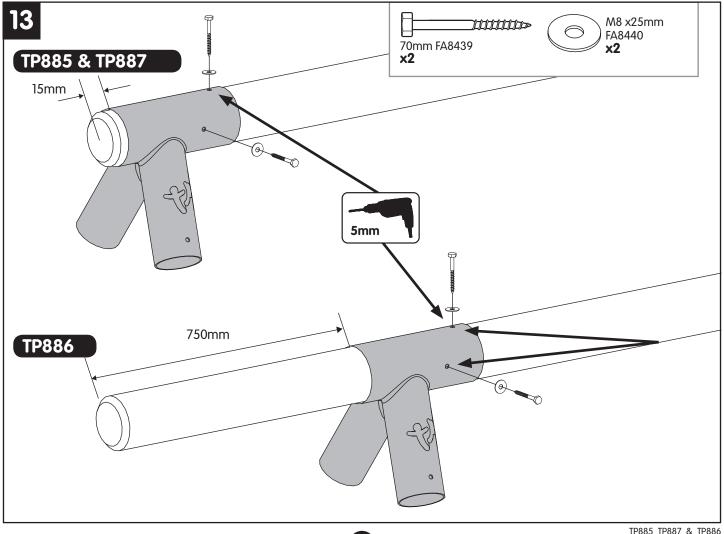

14 Locate your swing seats correctly:


TP885

MW0203 - Double Top Bar

TP885 x2

TP887 x2

 TP886 x3




TP887


MW0203 - Double Top Bar




TP886

 MW0201 - Triple Top Bar




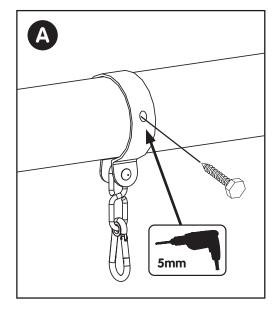


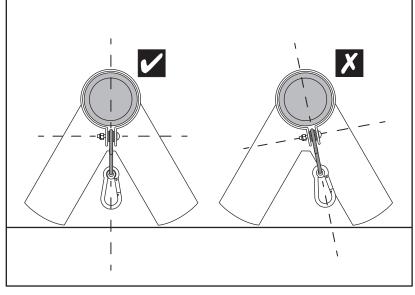



TP885 TP887 & TP886

40mm

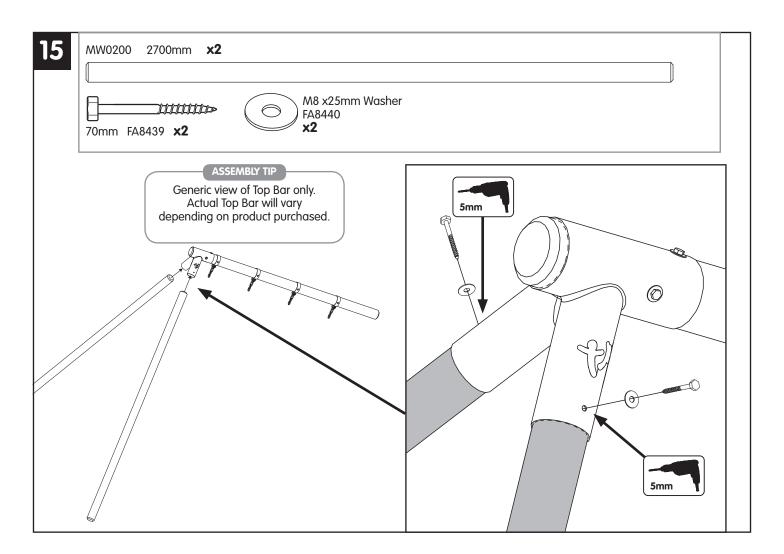

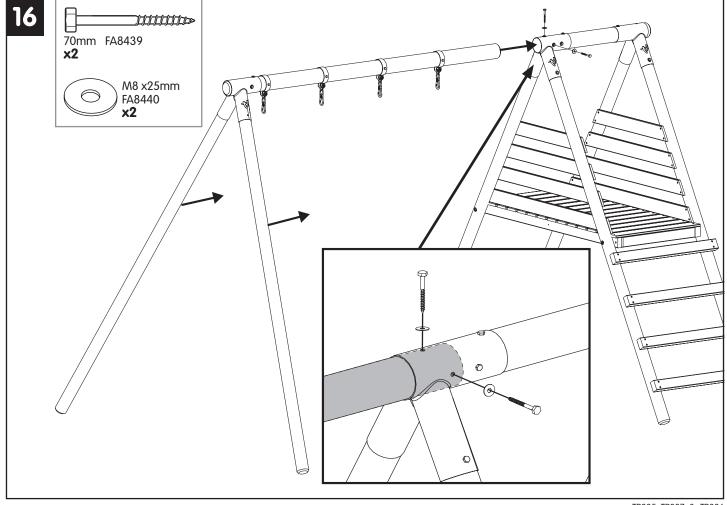

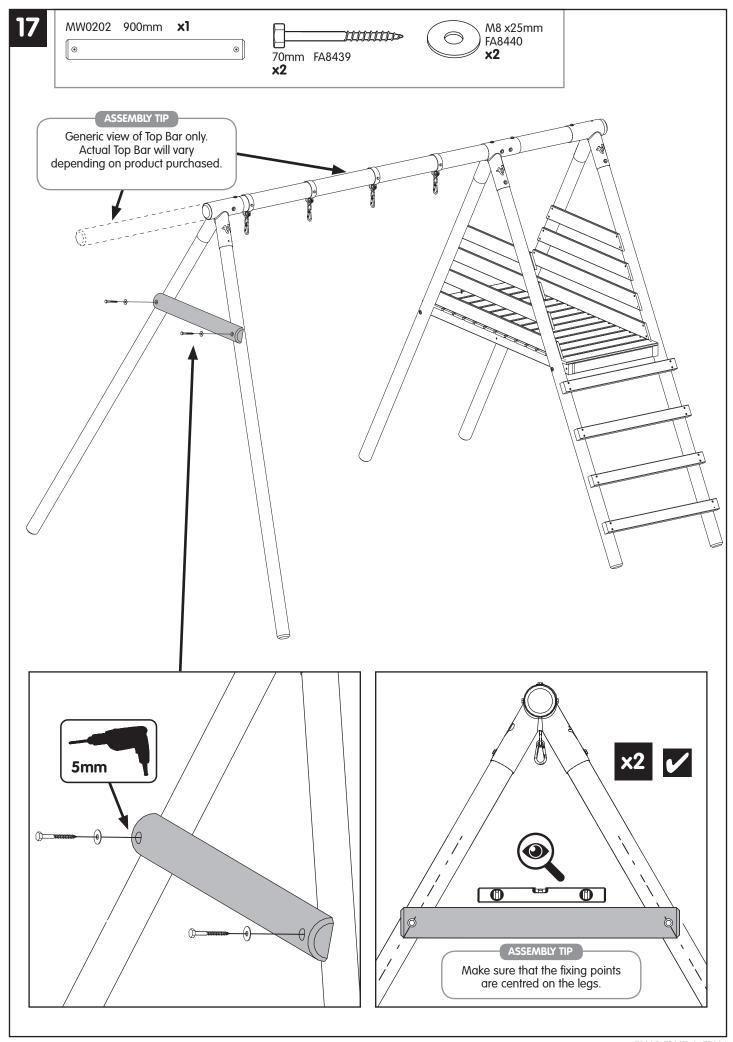

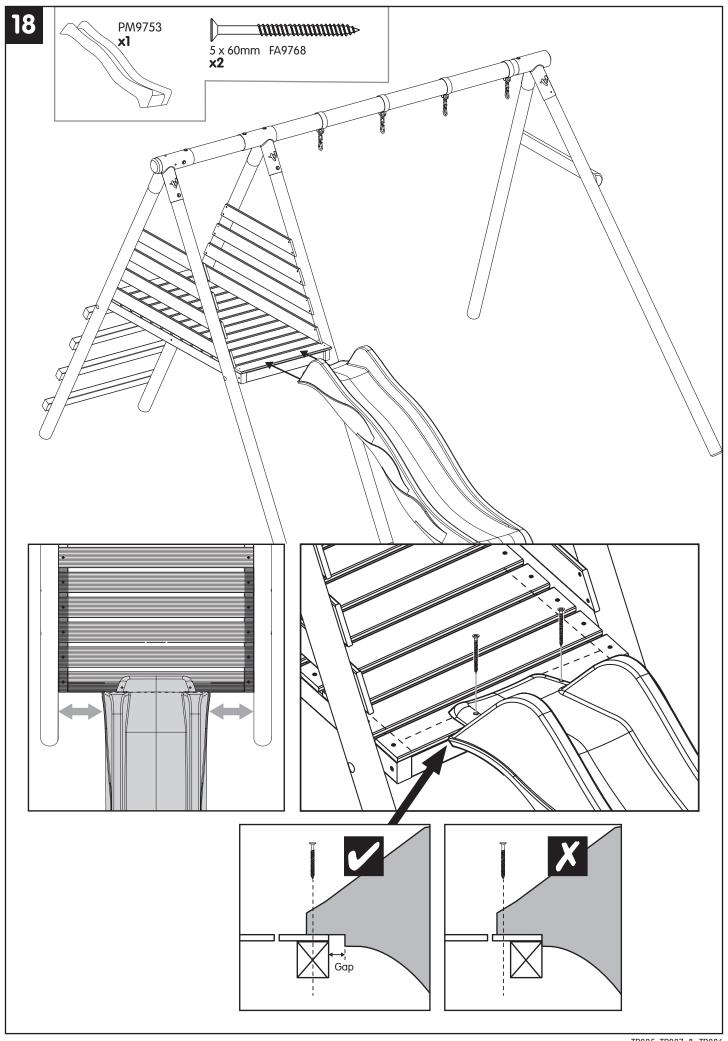

TP880 TP877 TP883 - Attaching Swing Accessories


19





IMPORTANT ASSEMBLY TIP


Glide Ride and Nest Swing need to be built before attaching to the Top Bar.

Please refer to product instruction manuals supplied with these products.

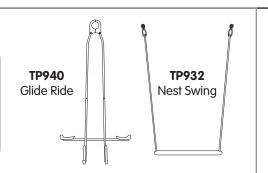


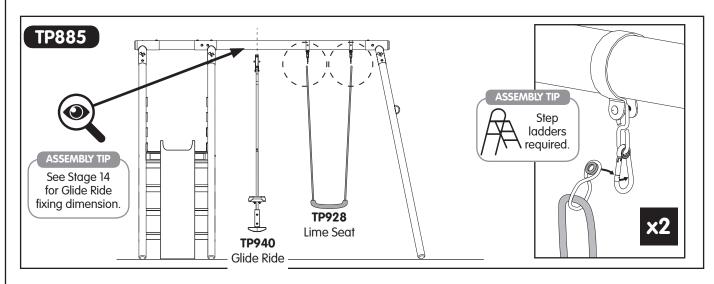


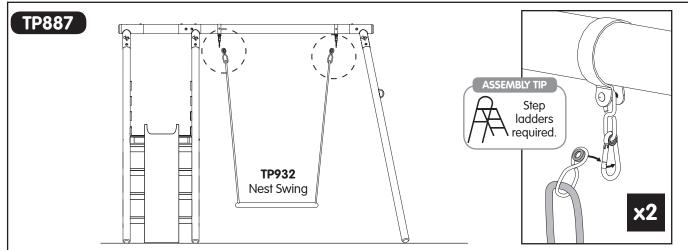


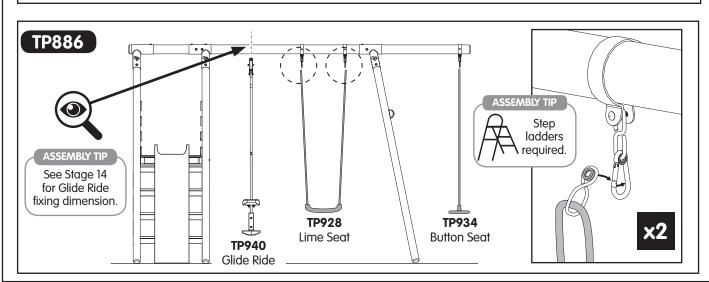

Swing Accessories - Height adjustment

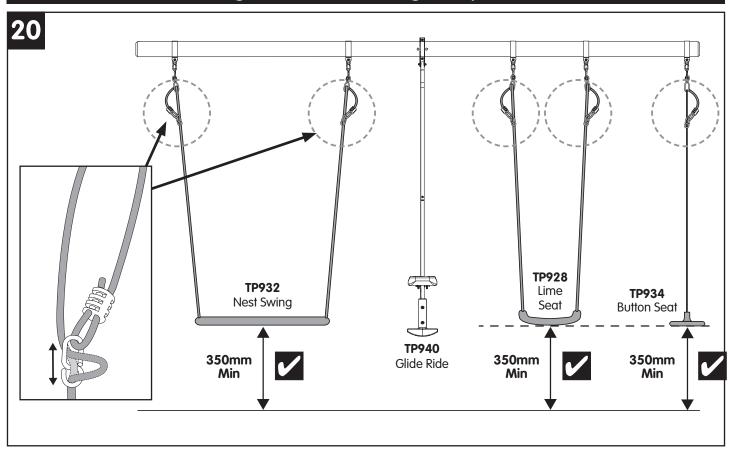

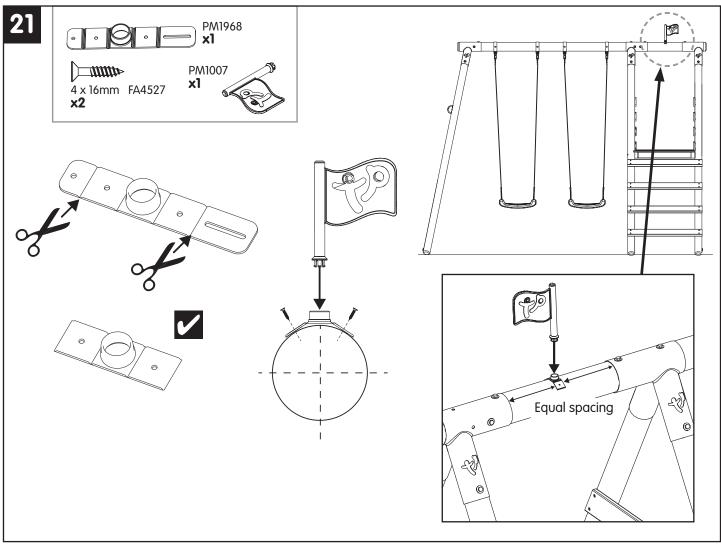

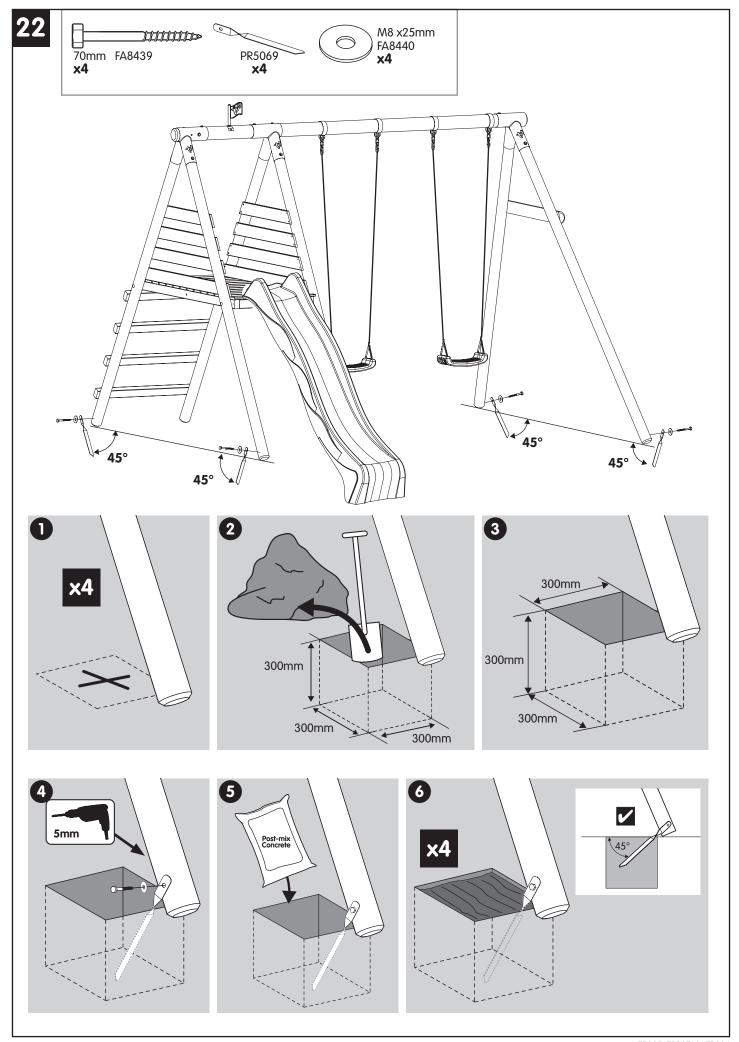

23



Thank you

Thank you for purchasing this product.

Please register your new product on line at tptoys.com

www.tptoys.com/productregistration

Find out about the guarantee for this product, visit www.tptoys.com/guarantee

For customer services and help with your product, visit www.tptoys.com/customer/help

Your TP Guarantee Number/Product Batch No is		